


Assembly manual

Salt wall system Complete kit WE5


Pramodan & Dinesh

Version 1

Dimensions for the electrical connection

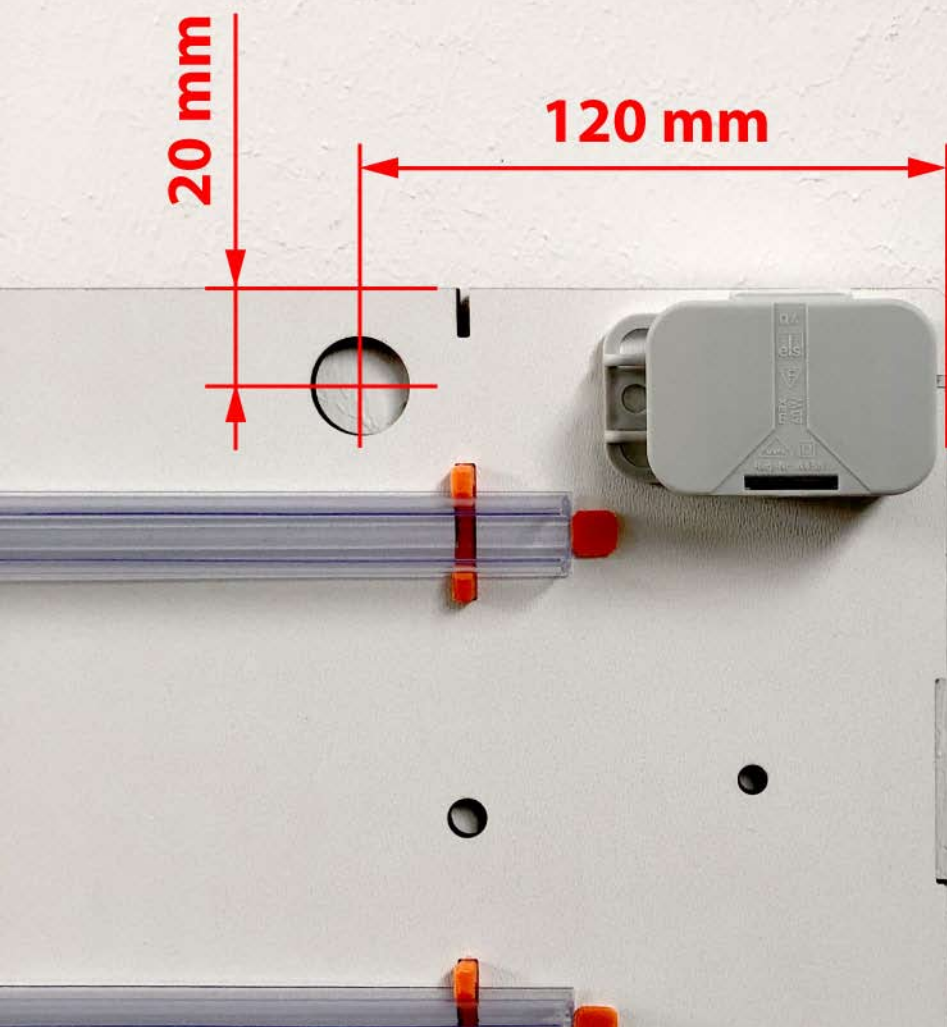

Required tools

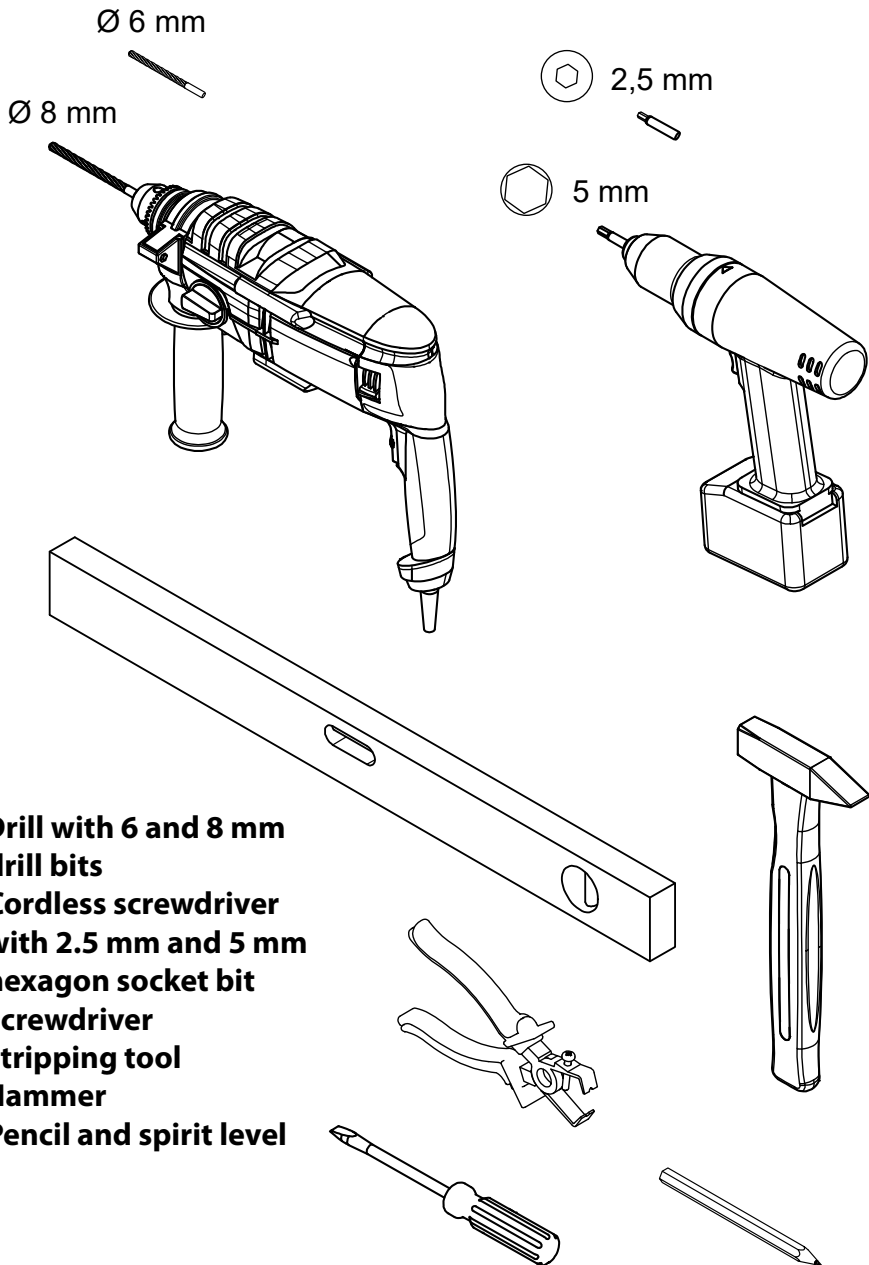

Cordless screwdriver: weakest setting!



 **2,5 mm**

Hold the salt brick firmly!


**Turn more slowly before
reaching the final depth!**





Ø 6 mm



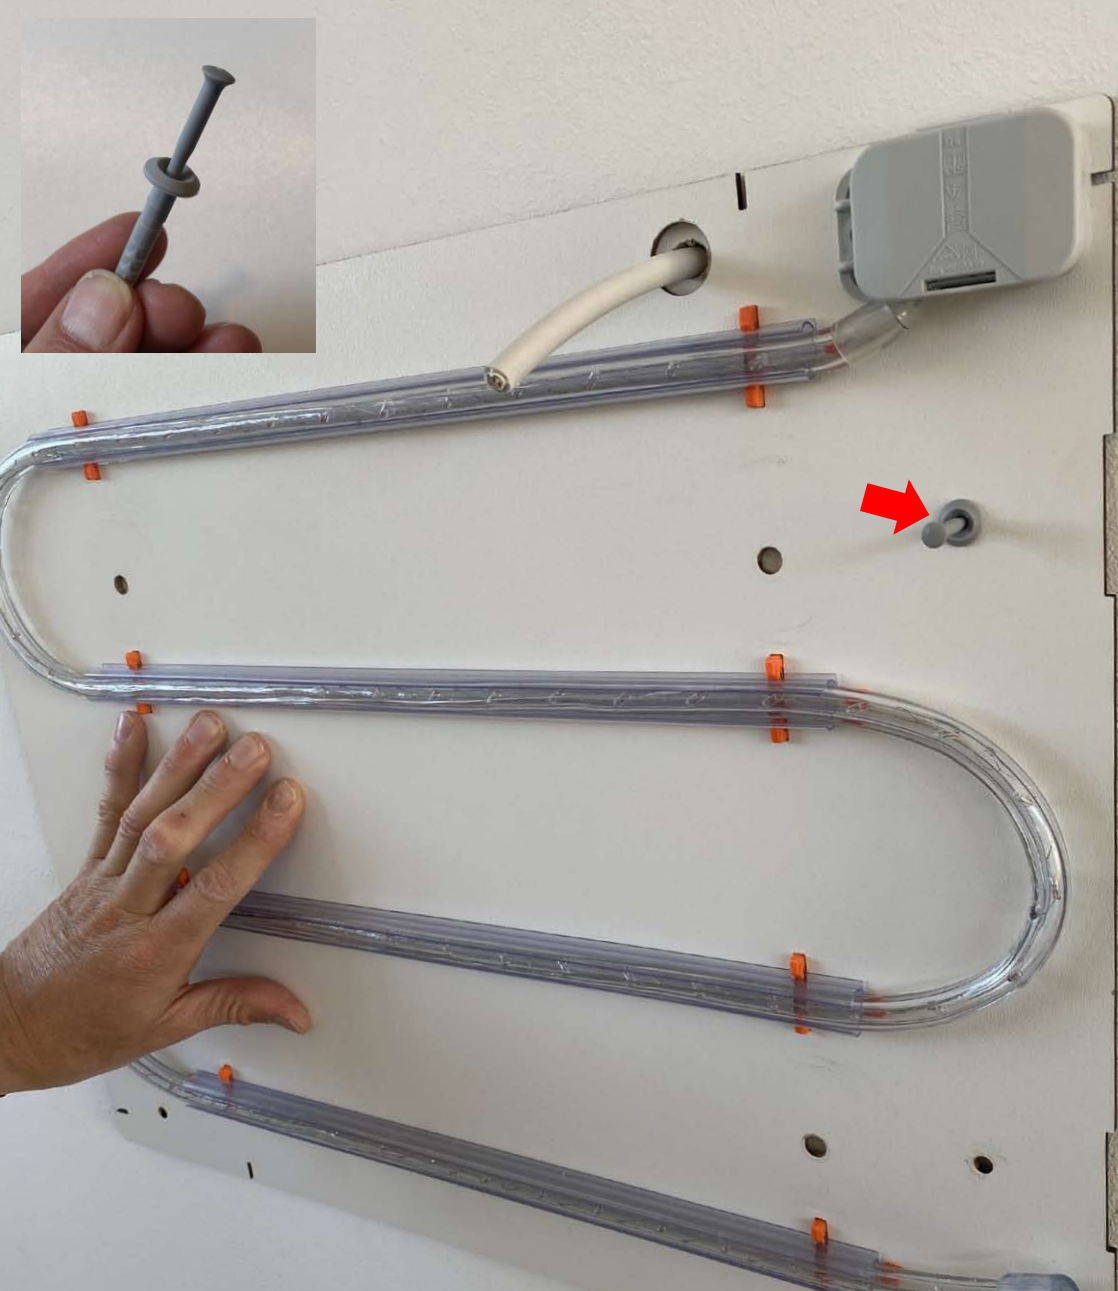

Insert the dowel and drive in the nail only lightly until the dowel grips.










Ø 8 mm






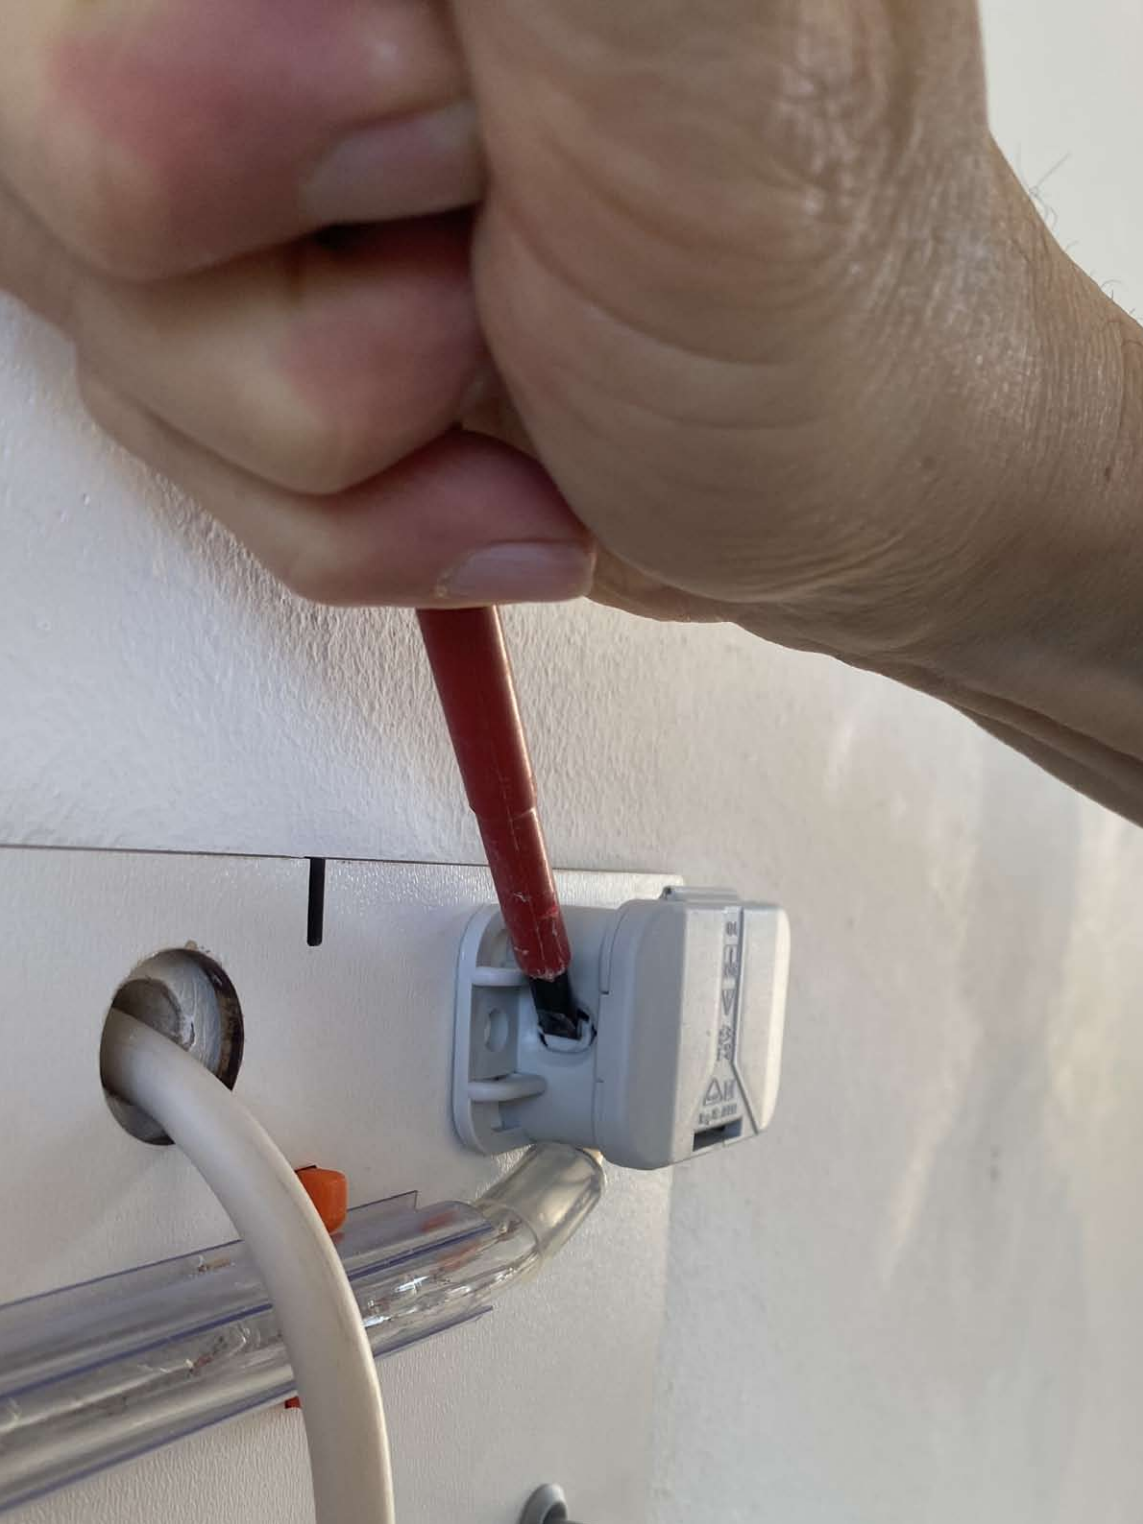





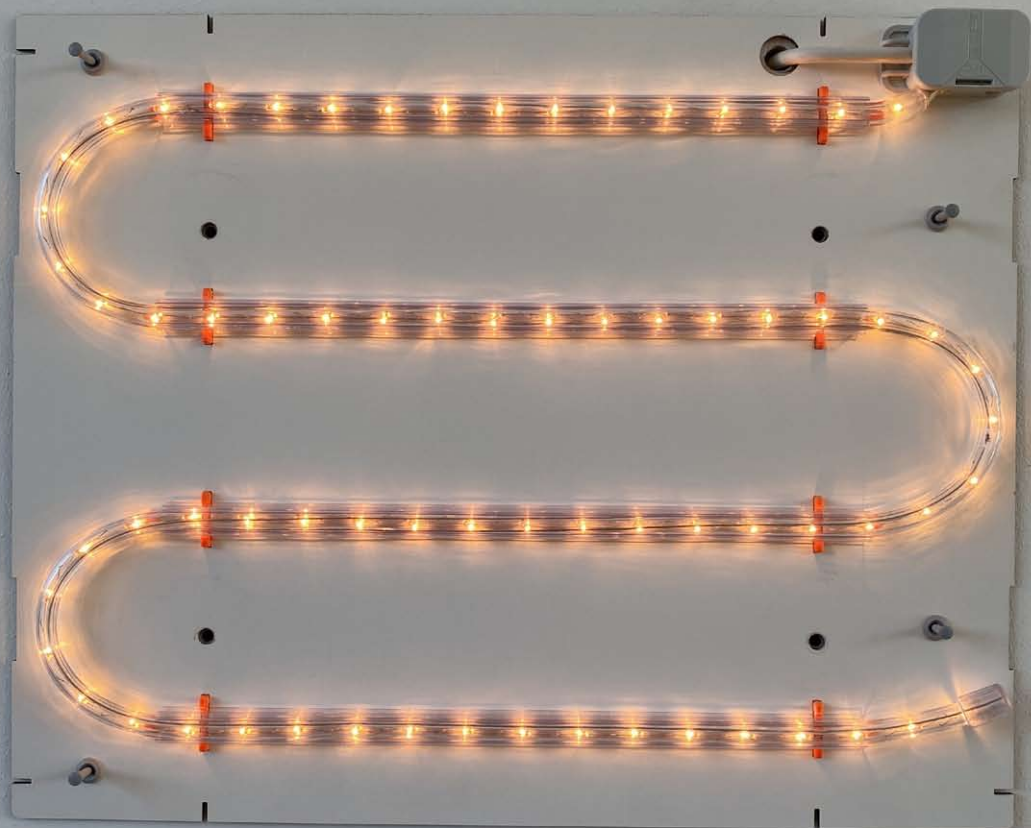



5 mm




Screw the holders in loosely (they must still be able to turn).



Turn 45° to the left



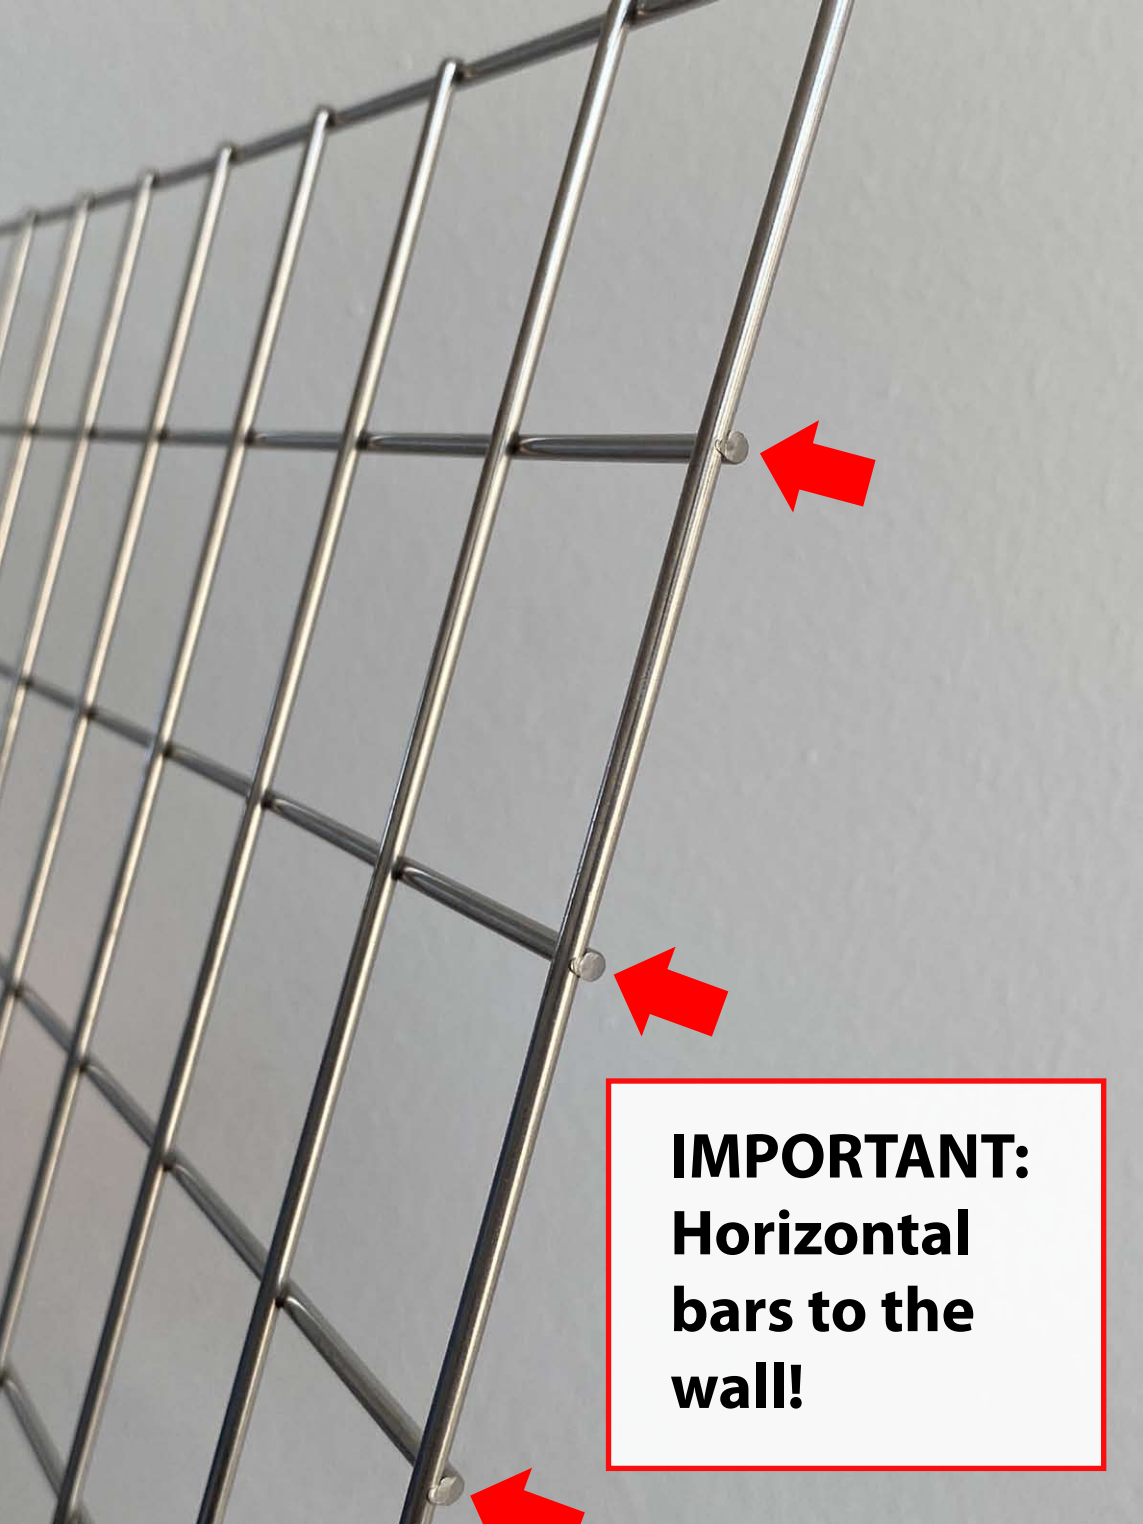

**IMPORTANT:
Horizontal
bars to the
wall!**




**Place each holder
in the second mesh
from the edge**



**Turn the holder
vertically;
all notches must
click into the grid.**




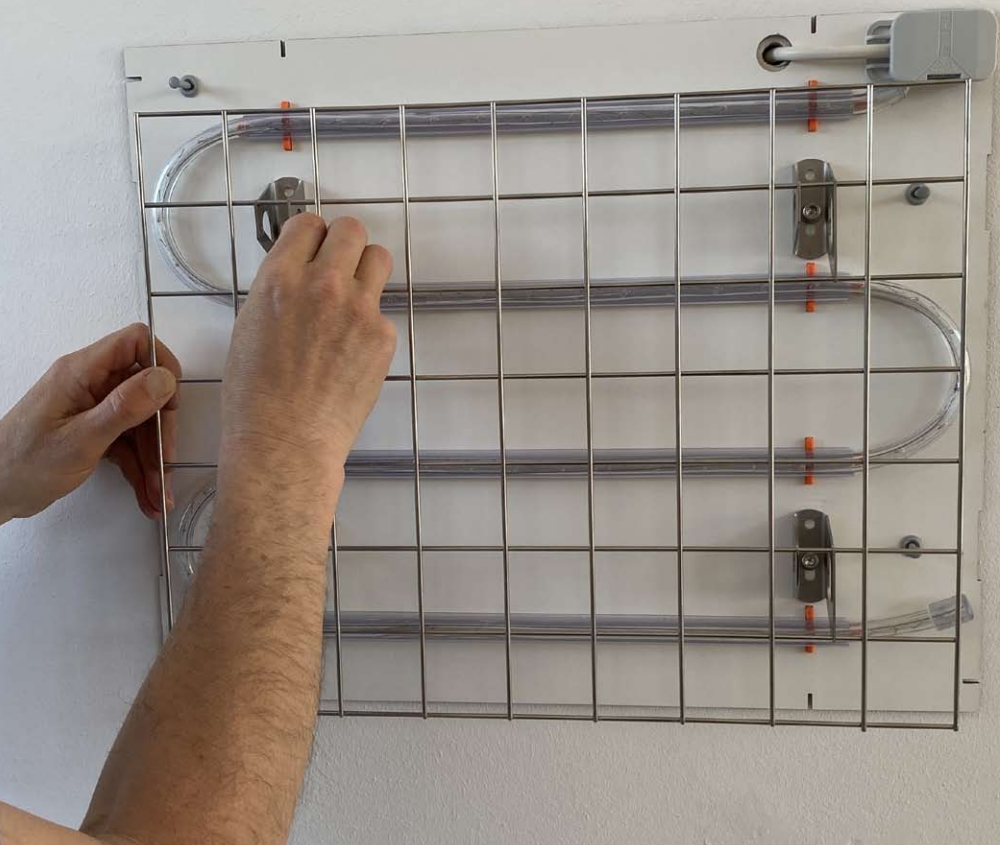

Move the grid sideways until the holders are aligned with the centre of the mesh.






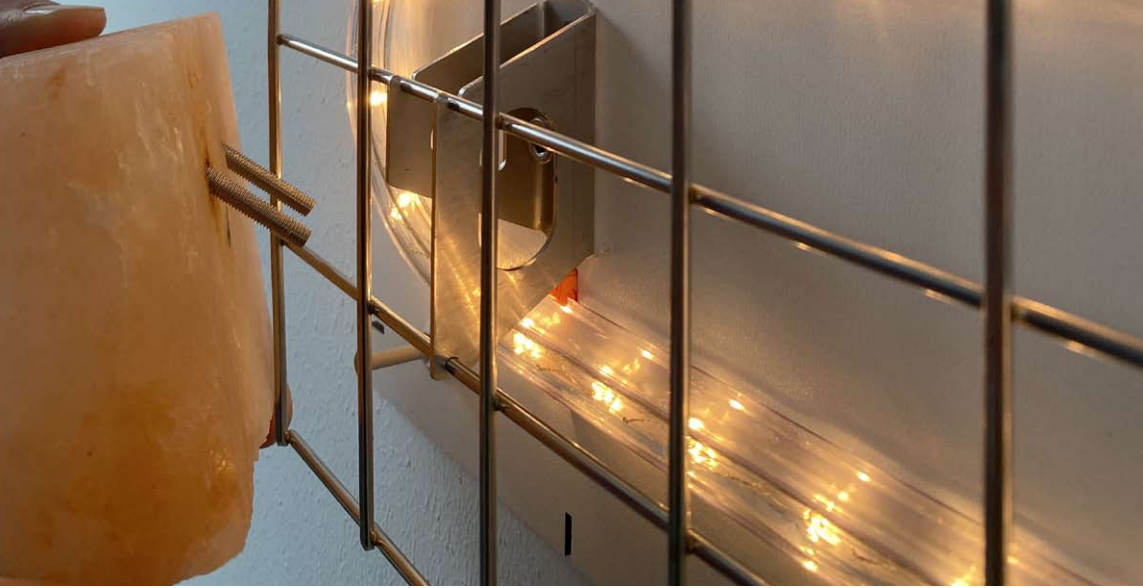

All the stones at the edge should be flush with the backplate.




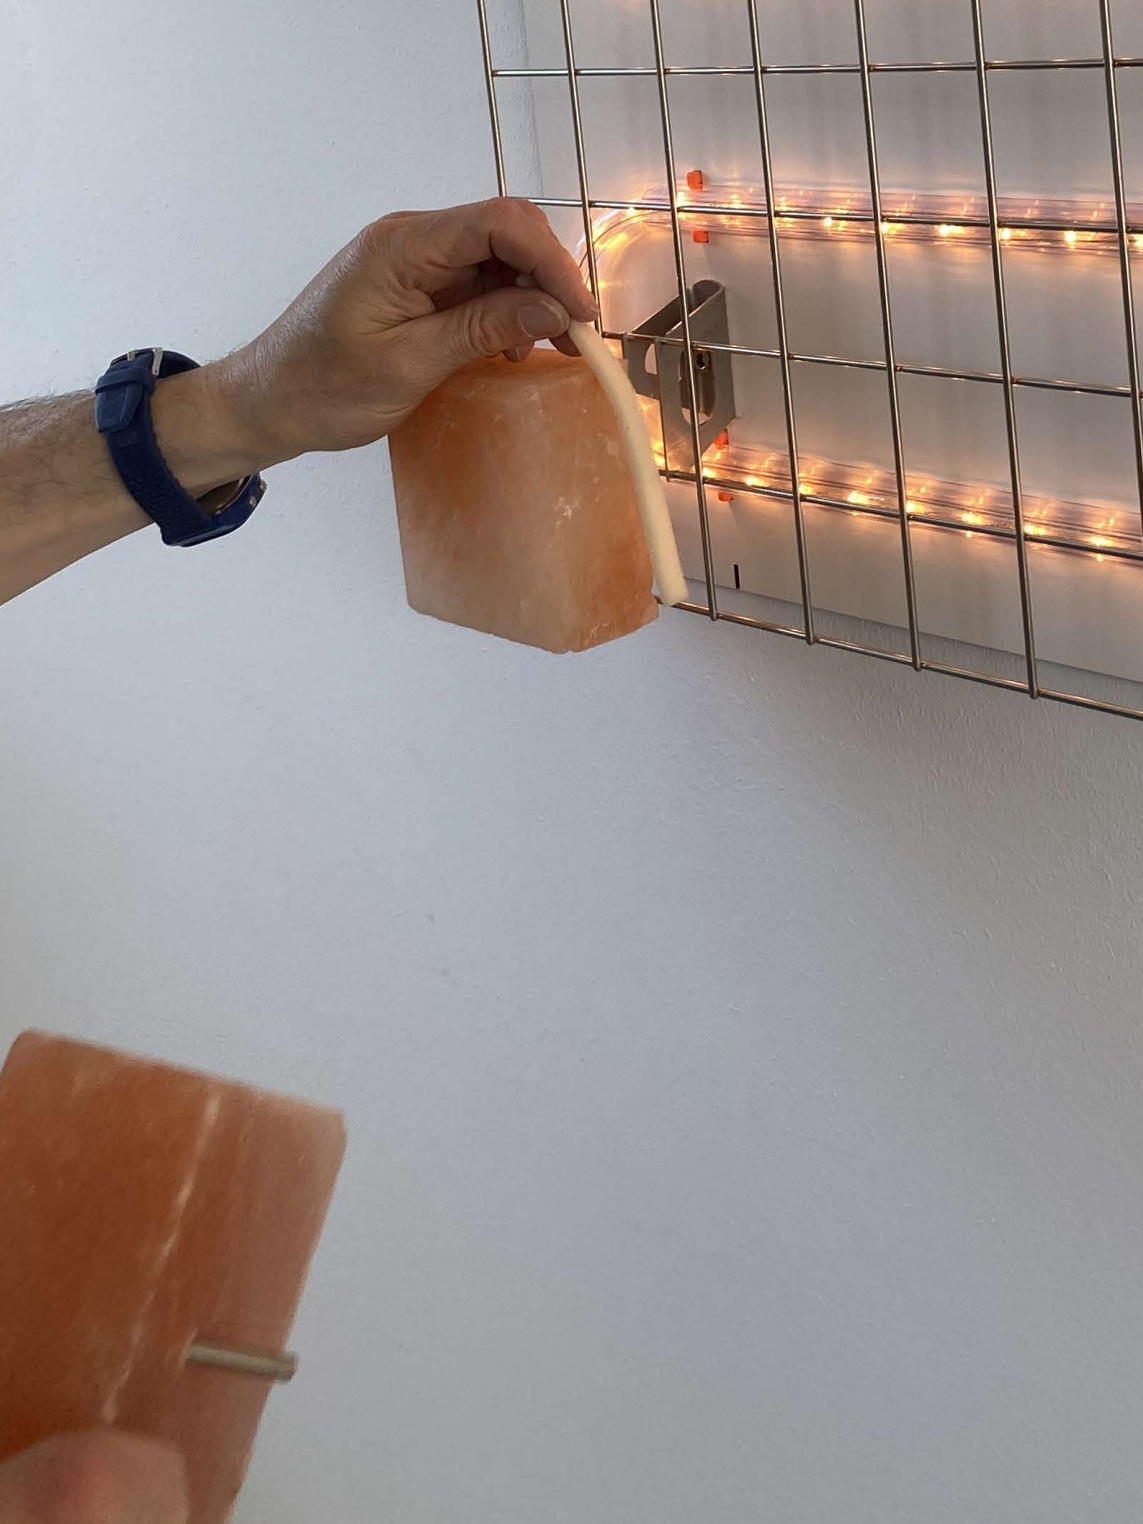


**Hook in brick and push against
the foam strip.**





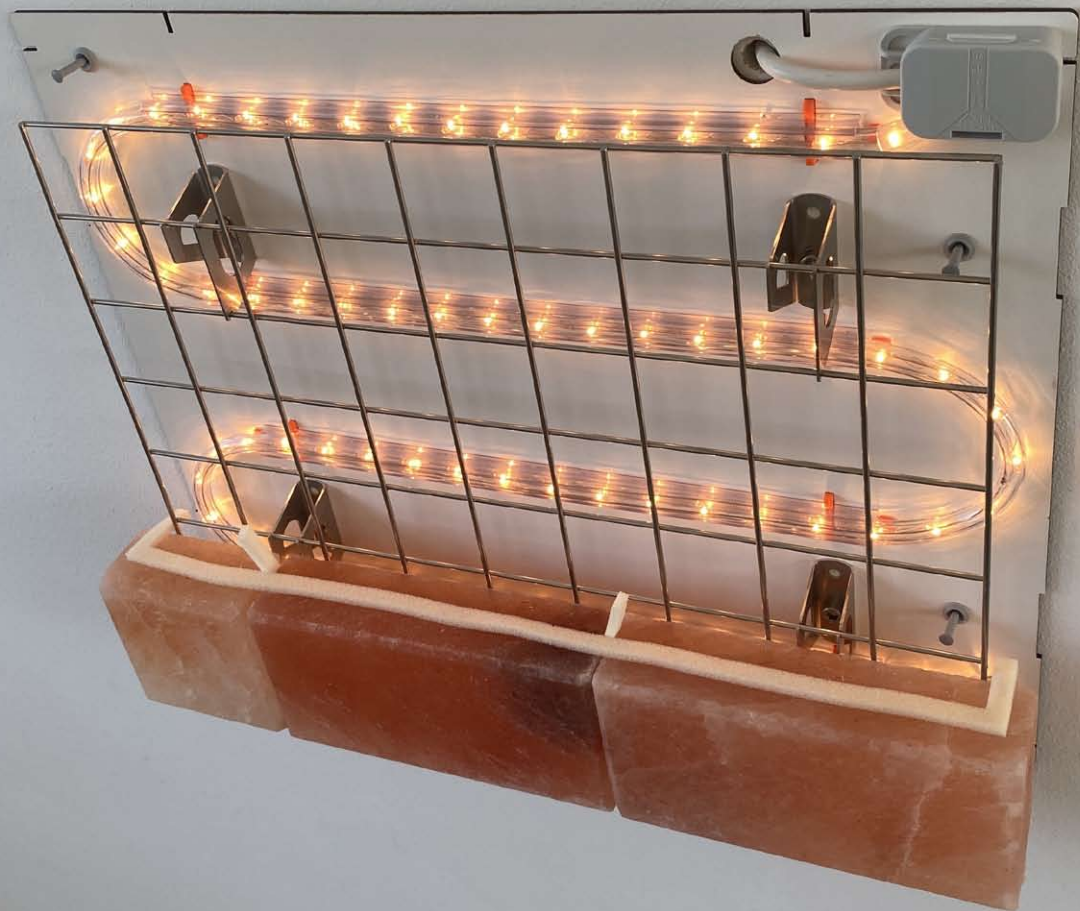

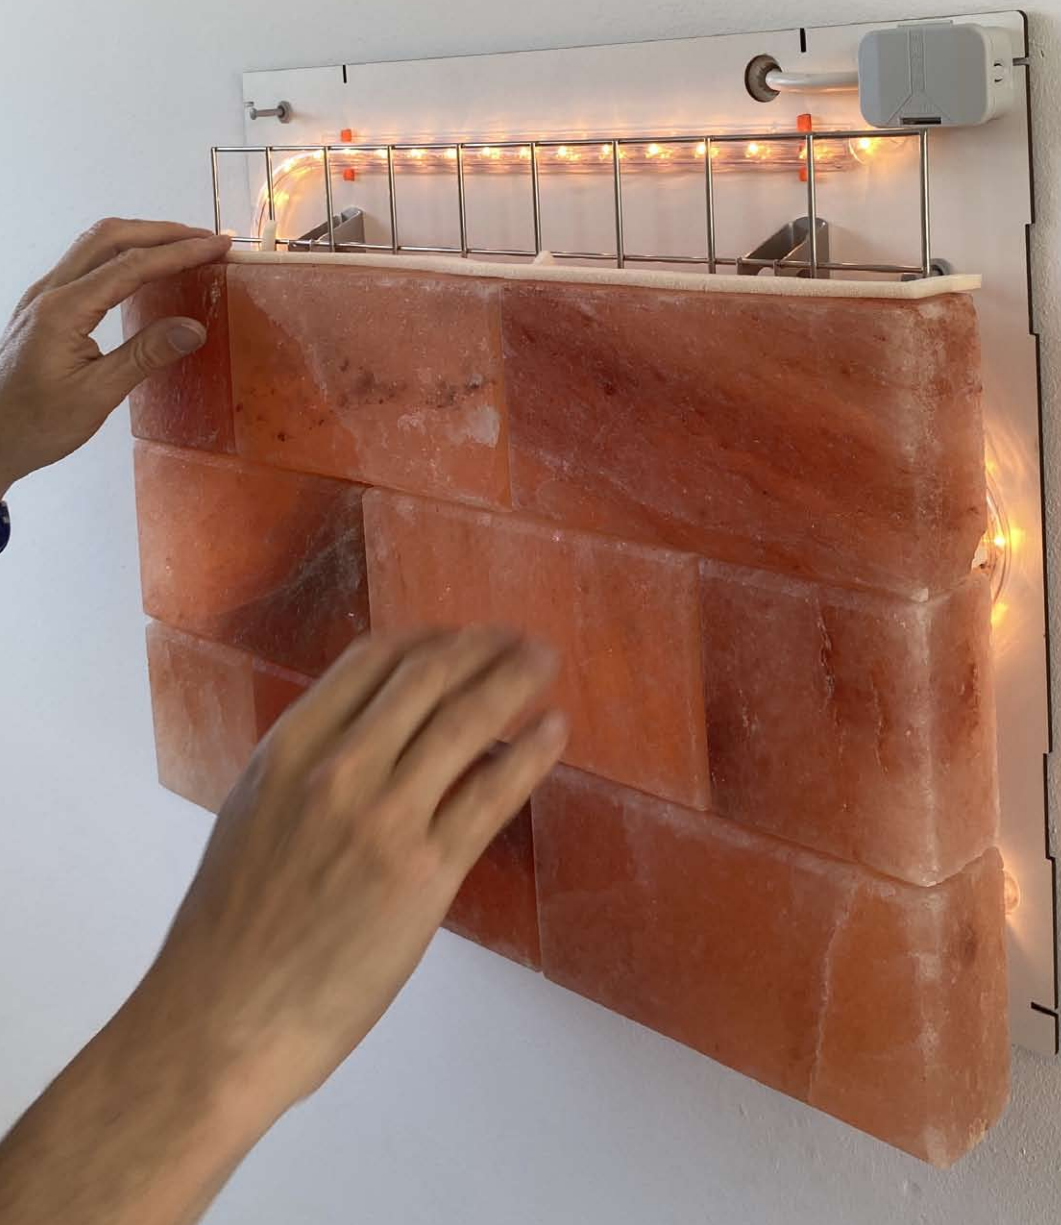


Knurled nut flush with the end of the screw



Hang the brick in place and tighten the knurled nut.




Press any protruding strips of foam back in.

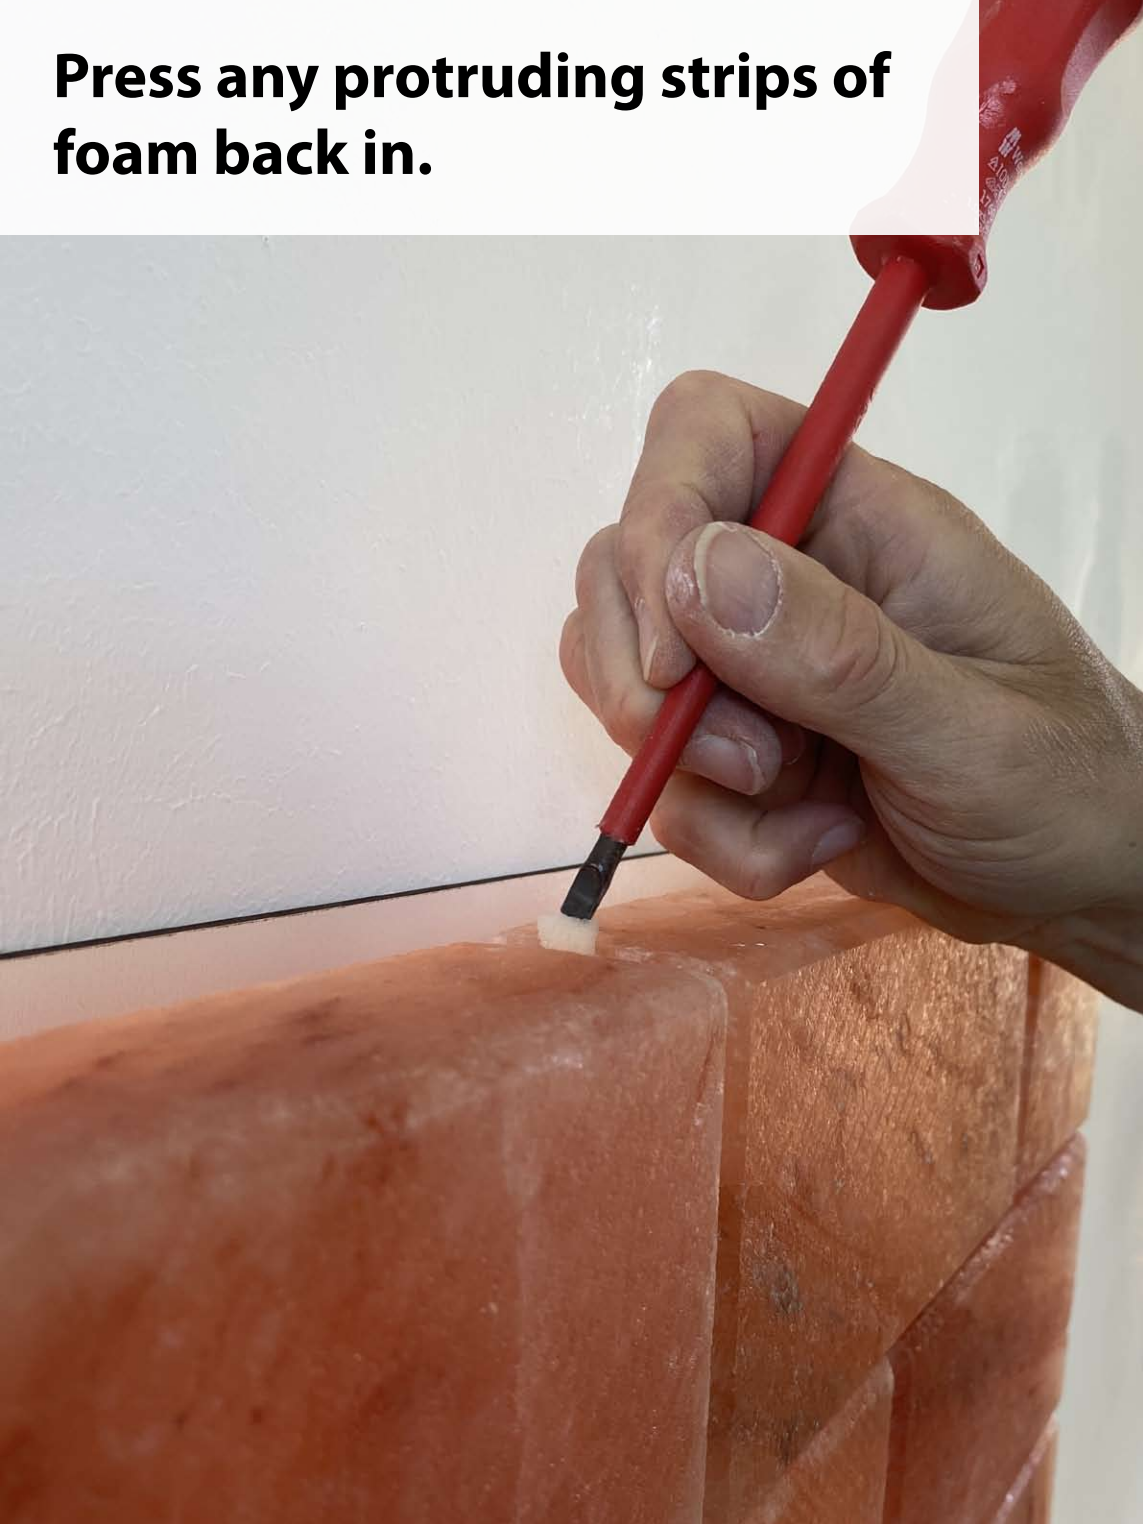





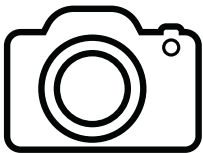

We would be delighted to receive photos of your salt wall.



Please feel free to include a comment when sending them to info@Bergsalz.com or Instagram: [@salzwand](https://www.instagram.com/salzwand)