


Assembly Instructions

**WE5 Complete Salt Wall Kit
for multiple modules**


**by
Pramodan & Dinesh**

Version 1.2

Dimensions for the electrical connection



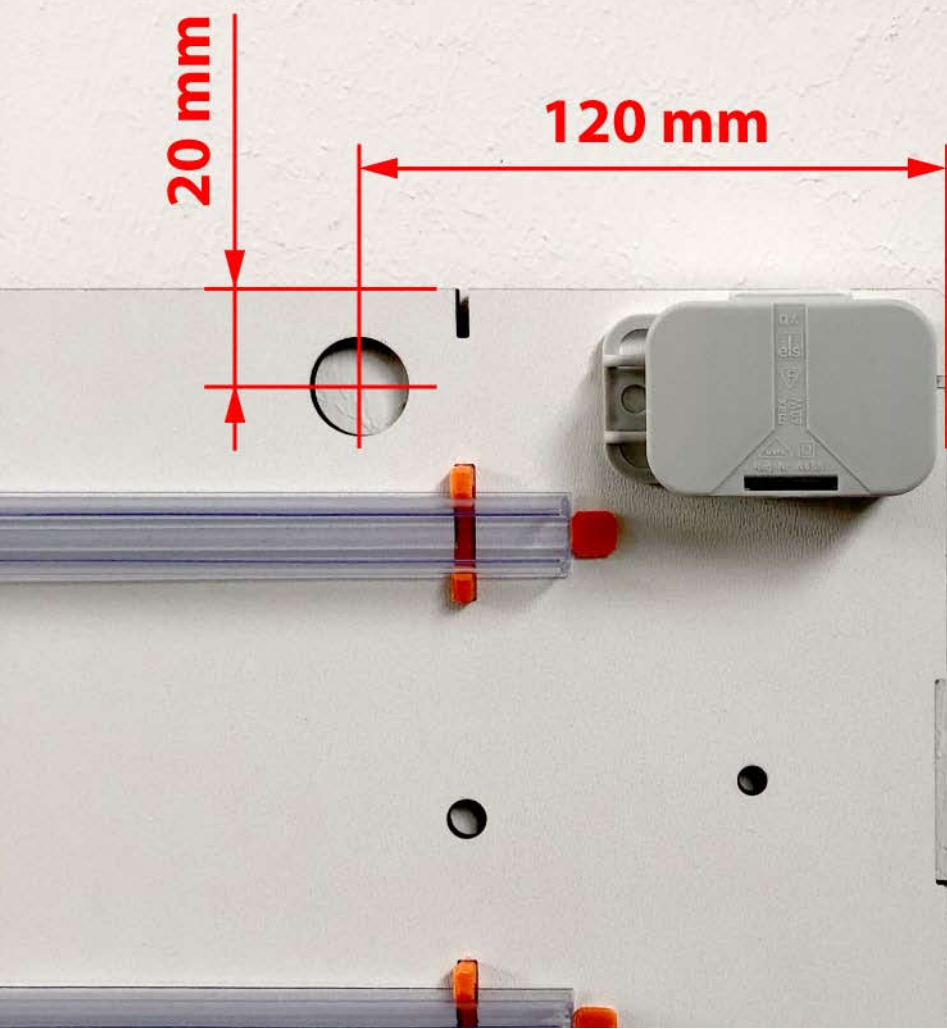


Ø 6 mm
Ø 8 mm



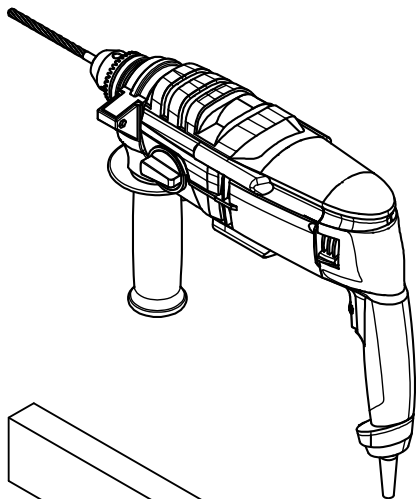


2,5 mm

5 mm

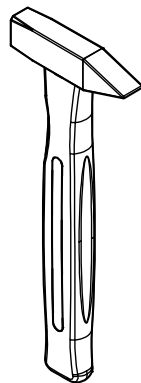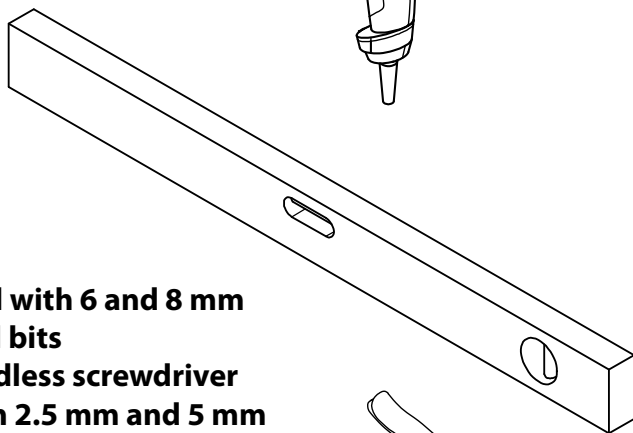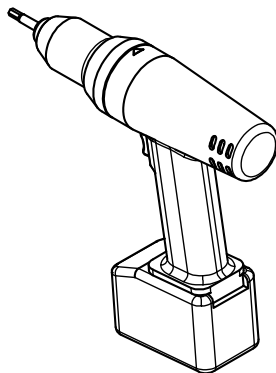

- Drill with 6 and 8 mm drill bits
- Cordless screwdriver with 2.5 mm and 5 mm hexagon socket bit
- Screwdriver
- Stripping tool
- Hammer
- Pencil and spirit level

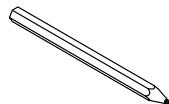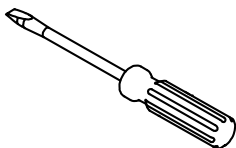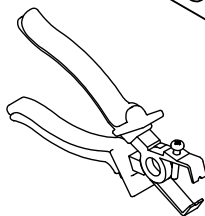


Cordless screwdriver: weakest setting!




 **2,5 mm**

Hold the salt brick firmly!


**Turn more slowly before
reaching the final depth!**

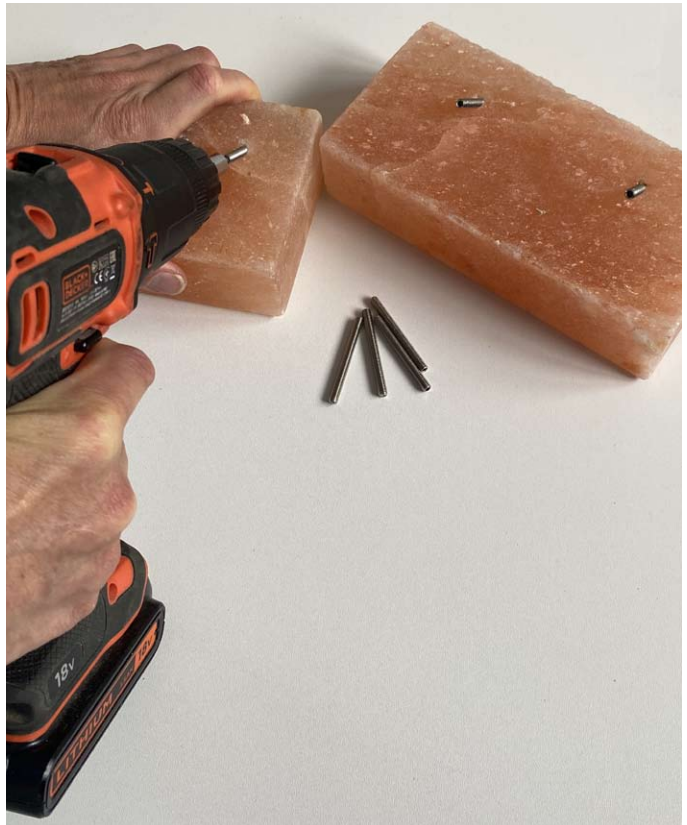

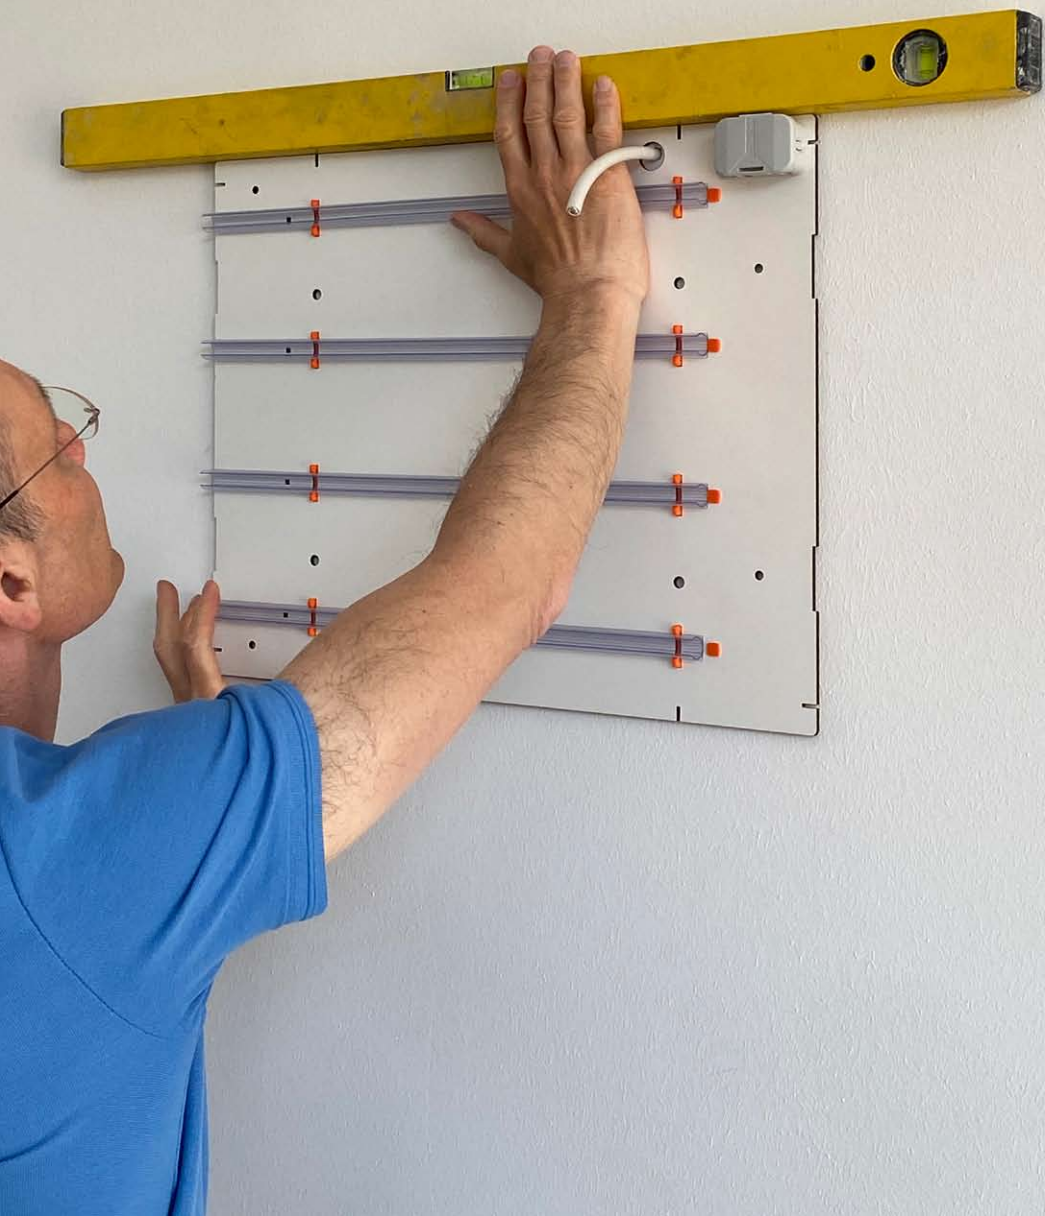


Ø 6 mm



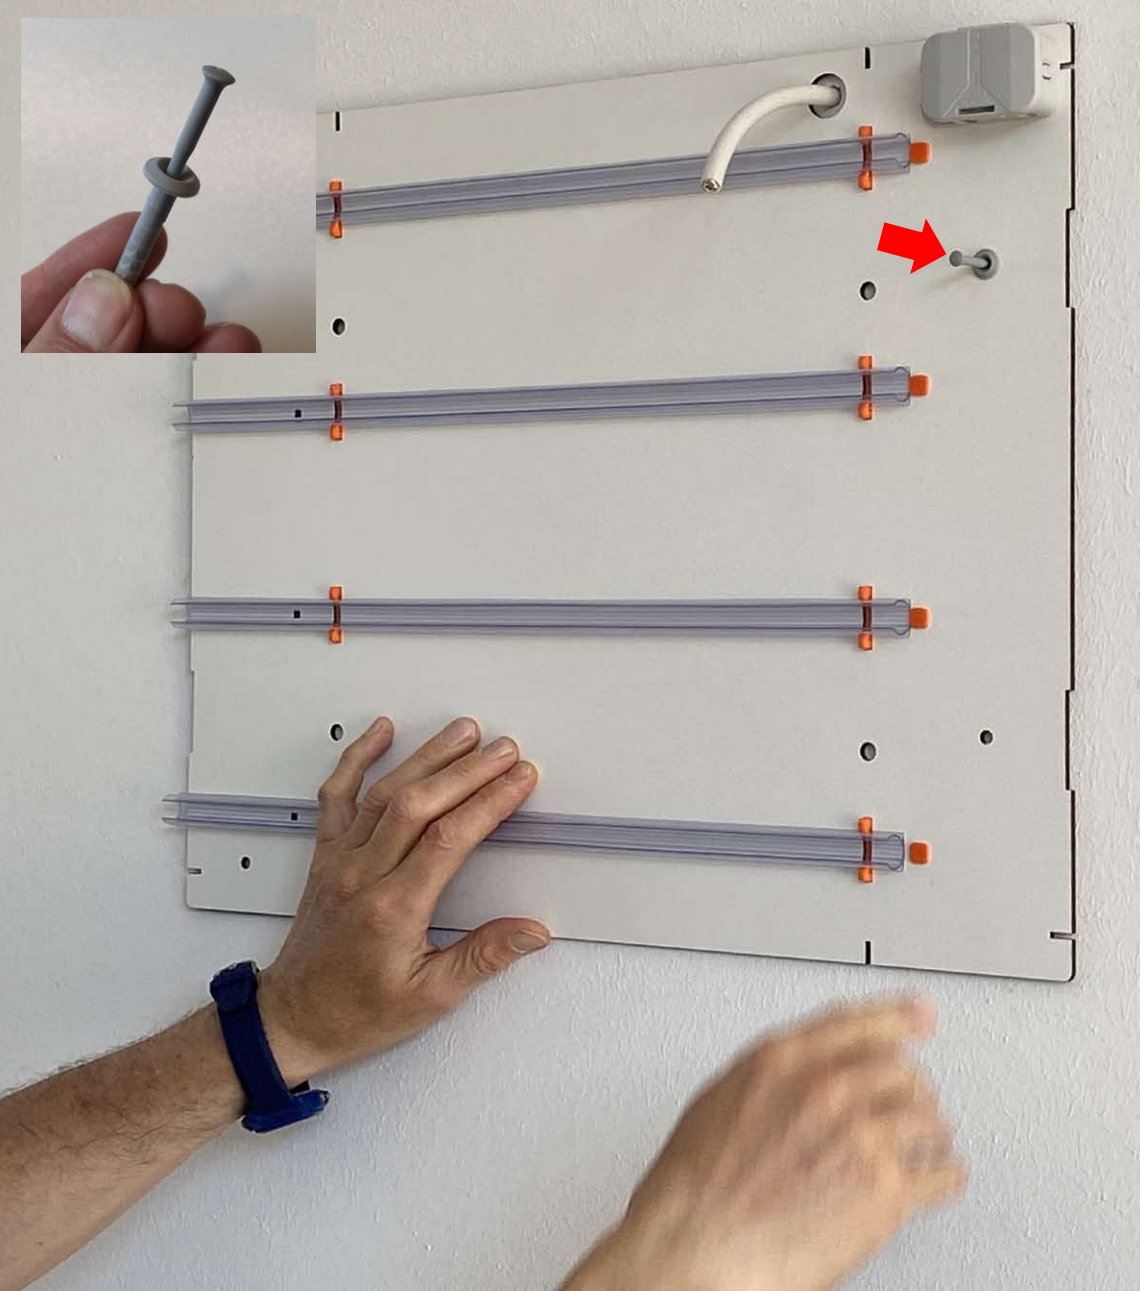



Insert the dowel and drive in the nail only lightly until the dowel grips.



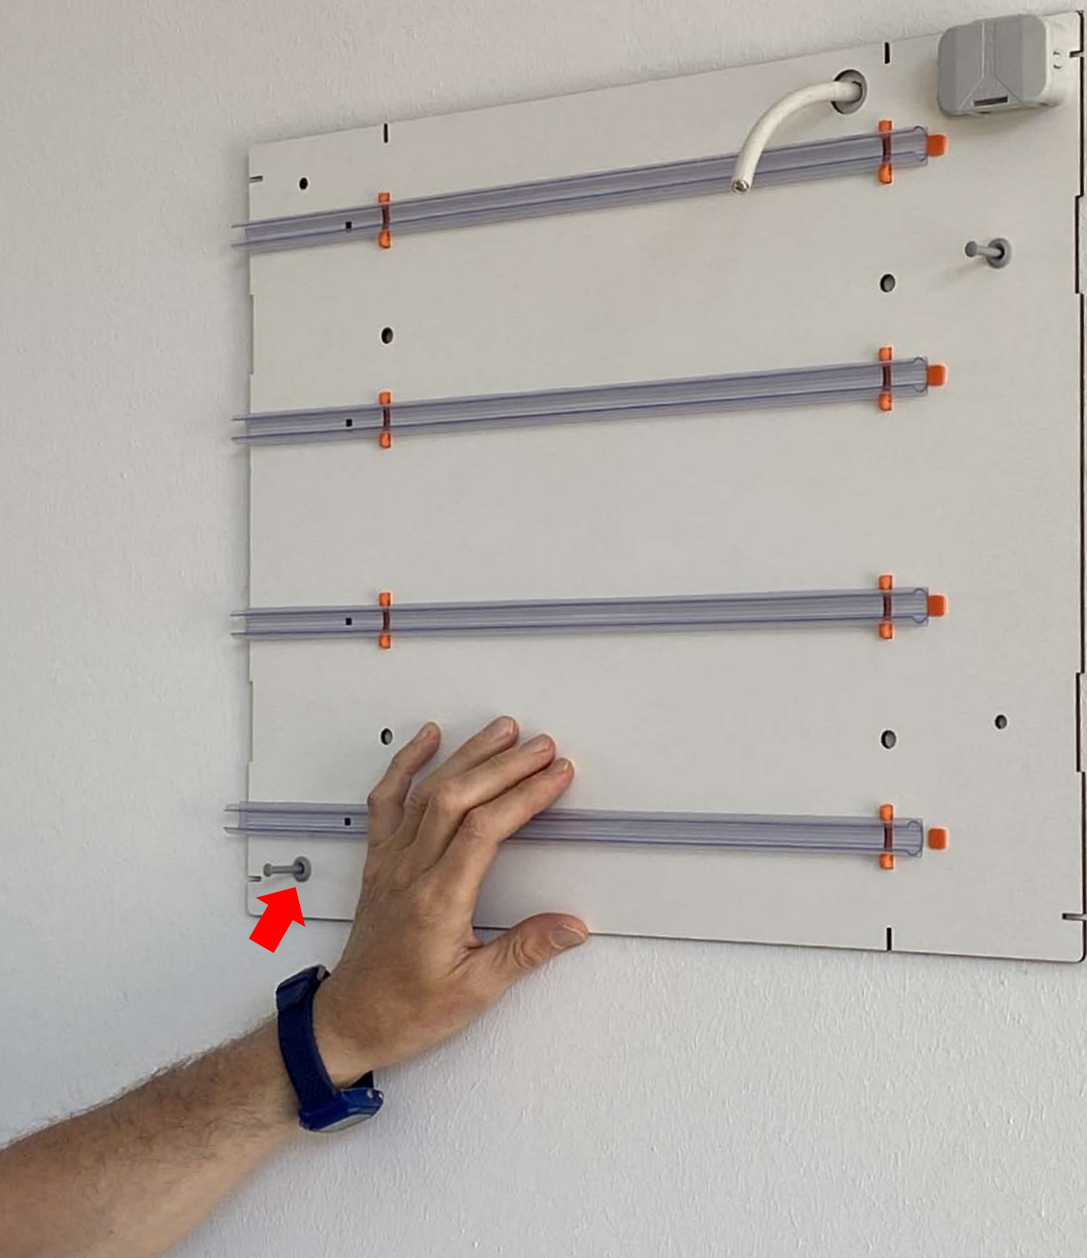




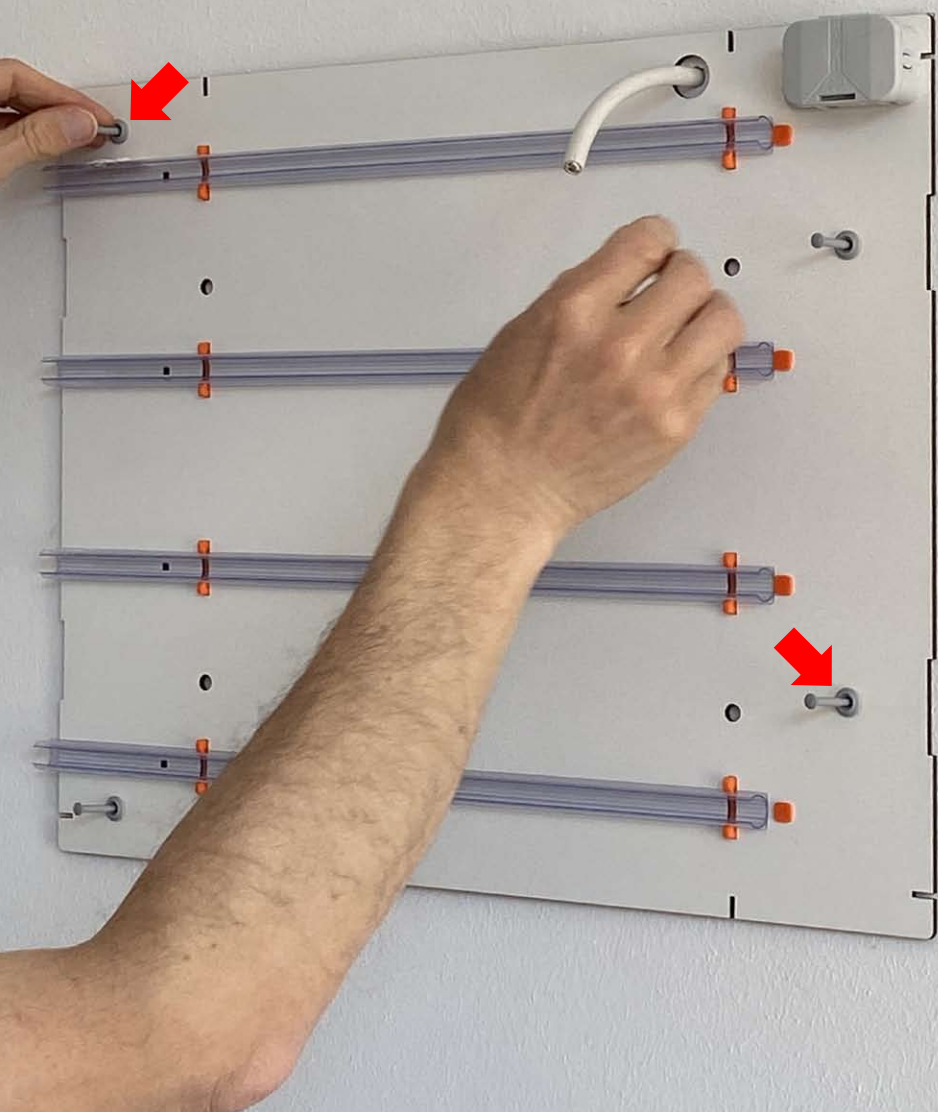

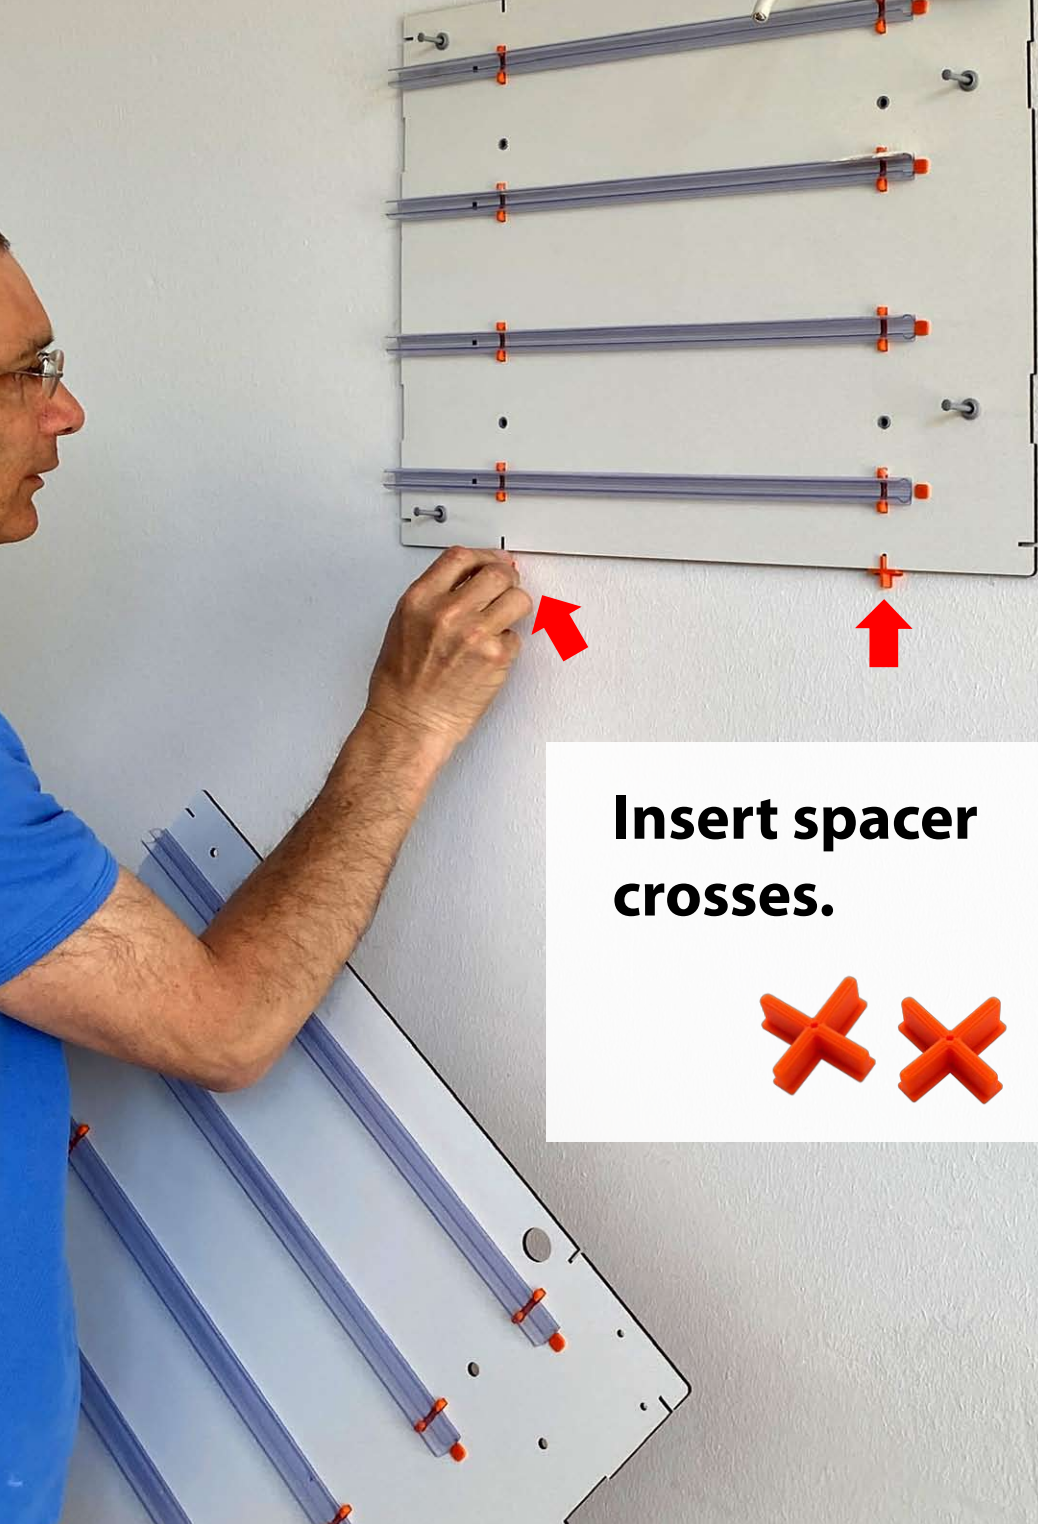



**Insert spacer
crosses.**



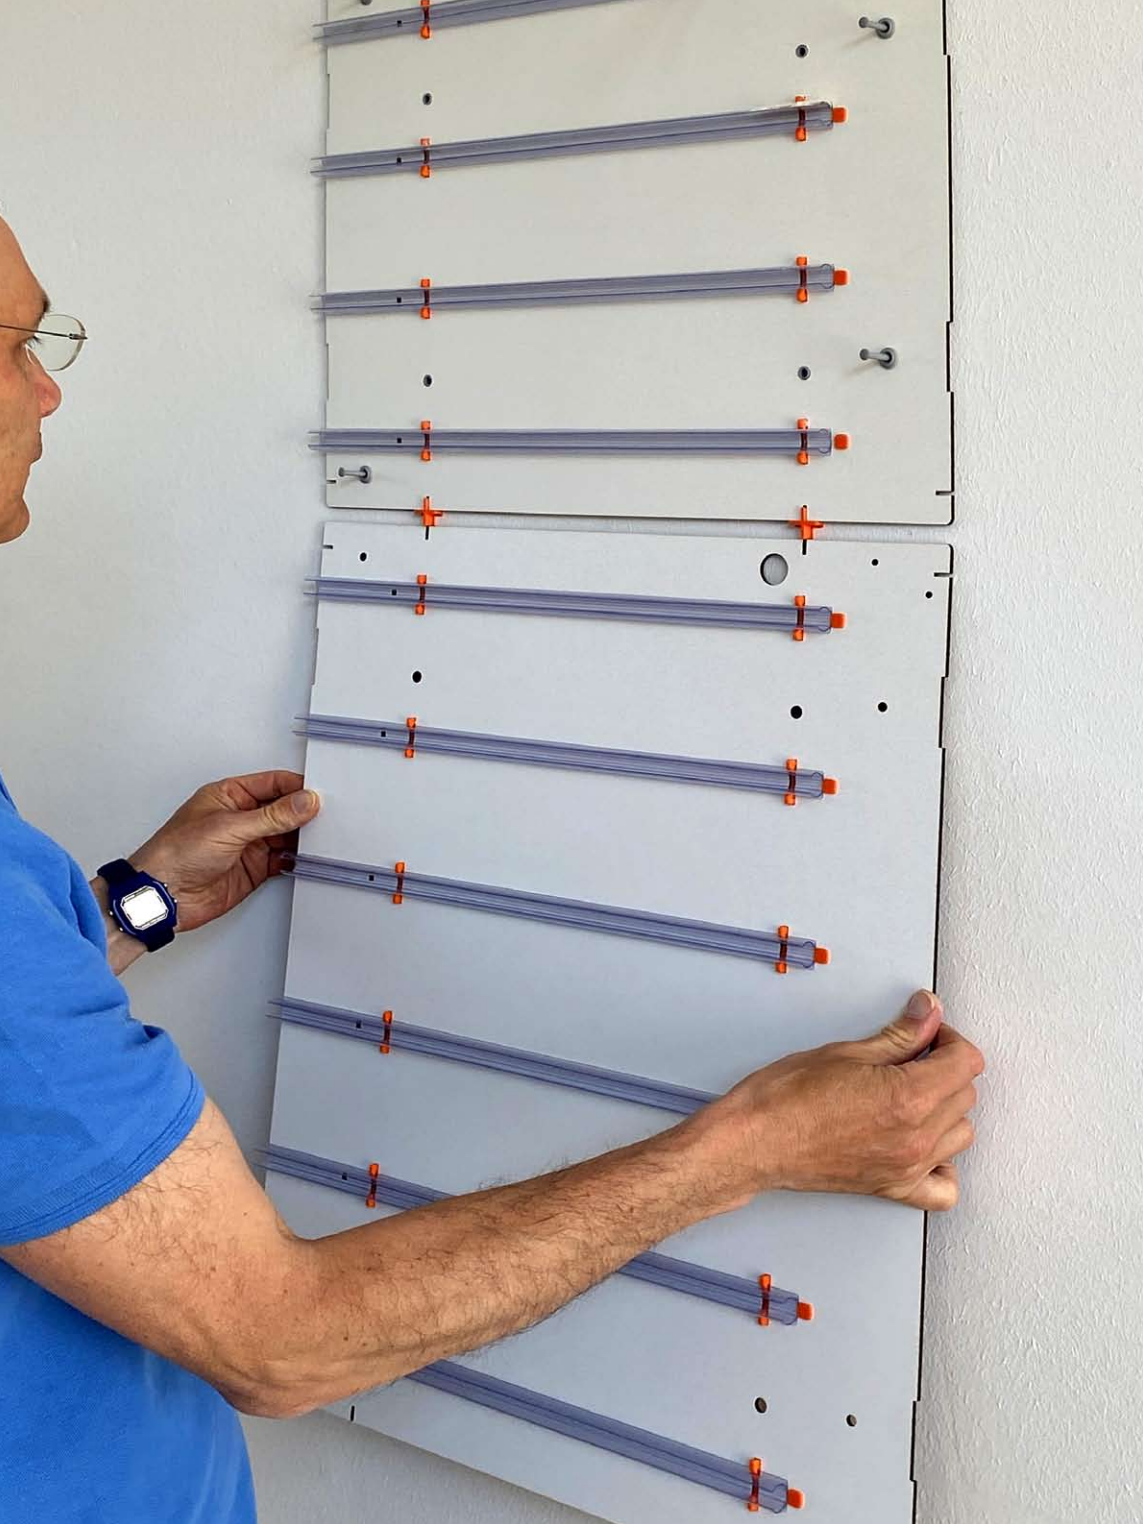



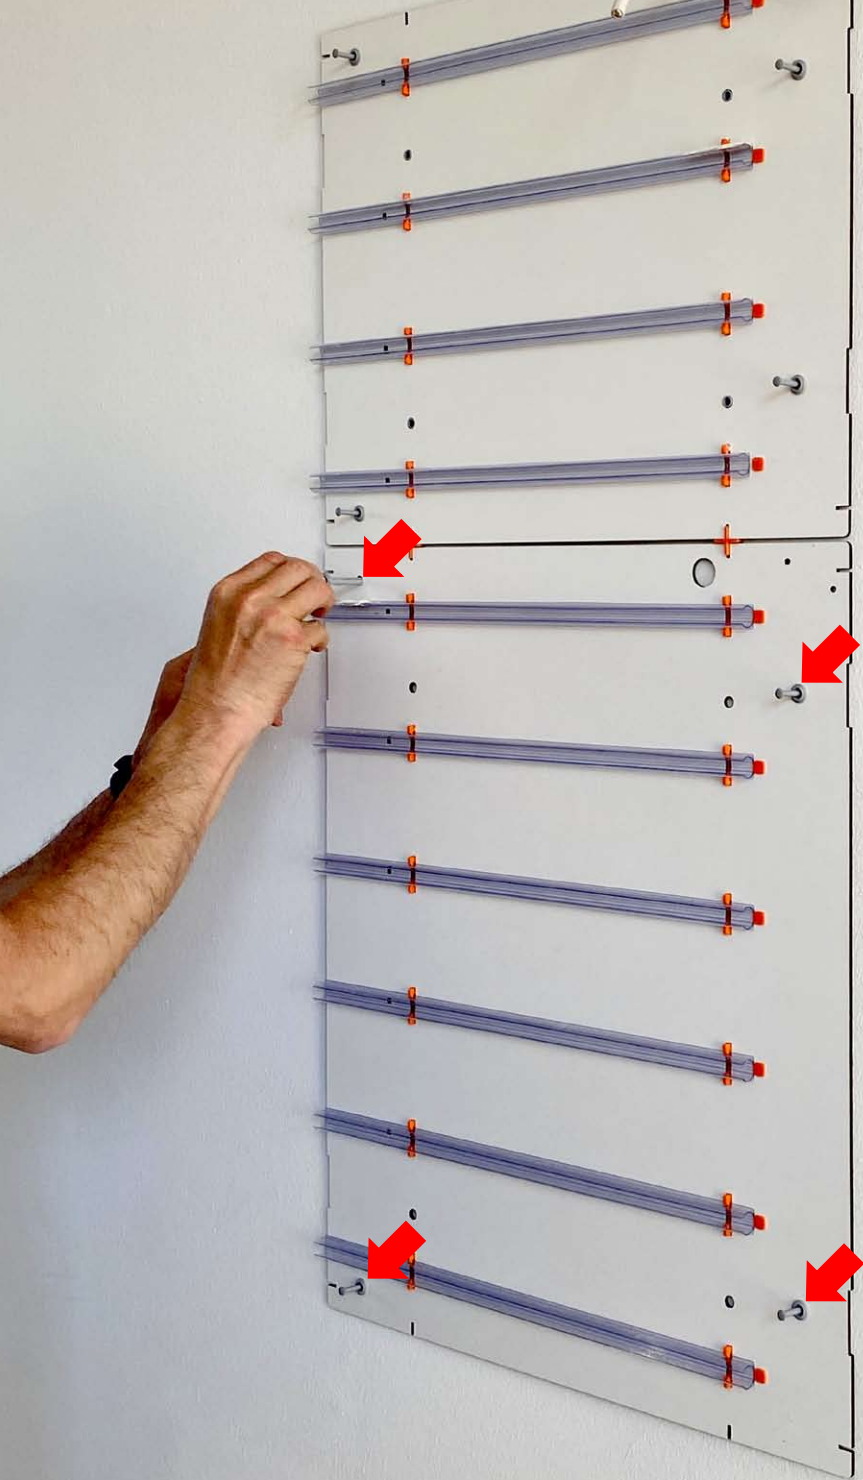


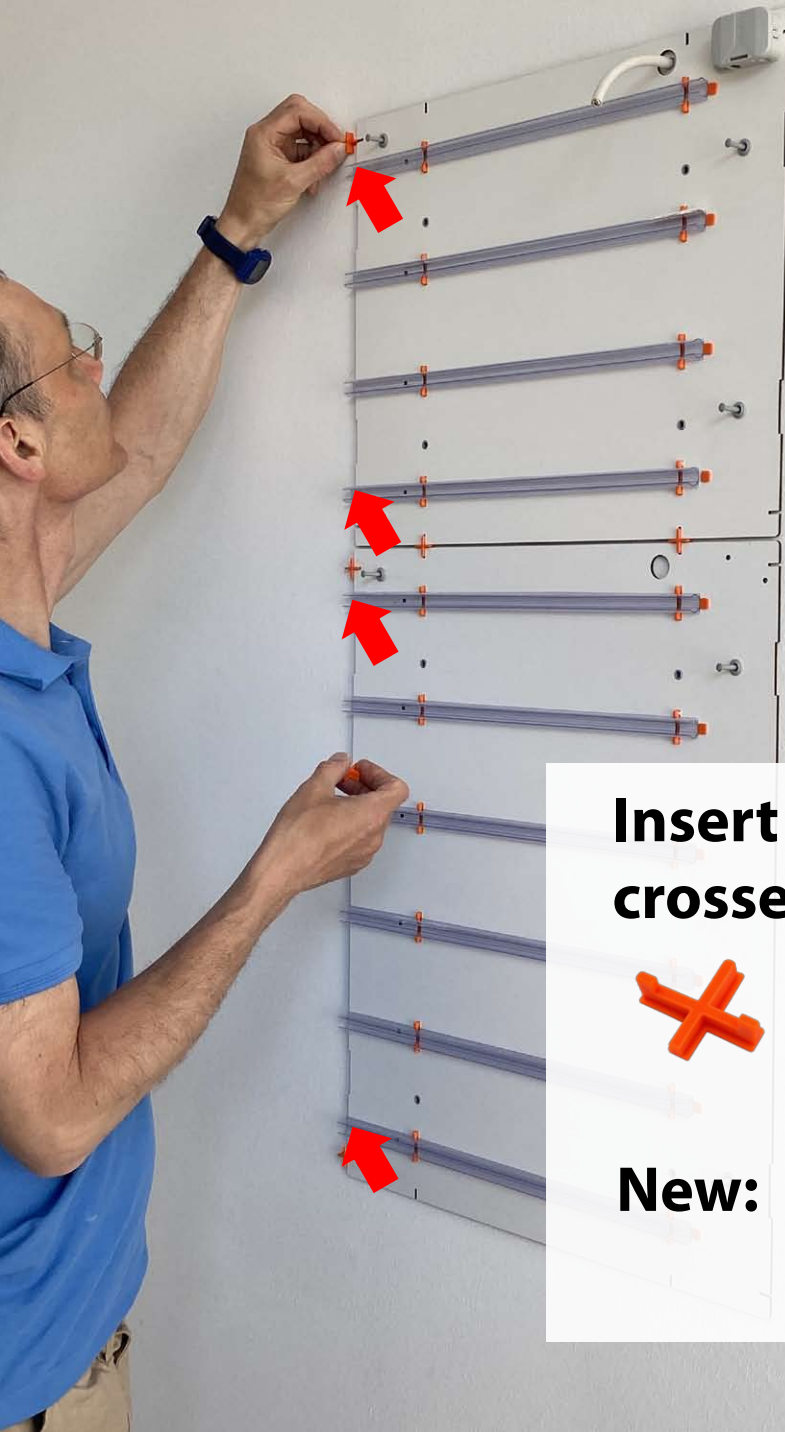



**Insert spacer
crosses.**




New:

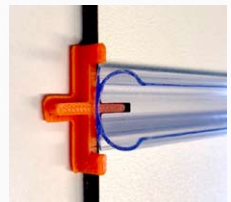

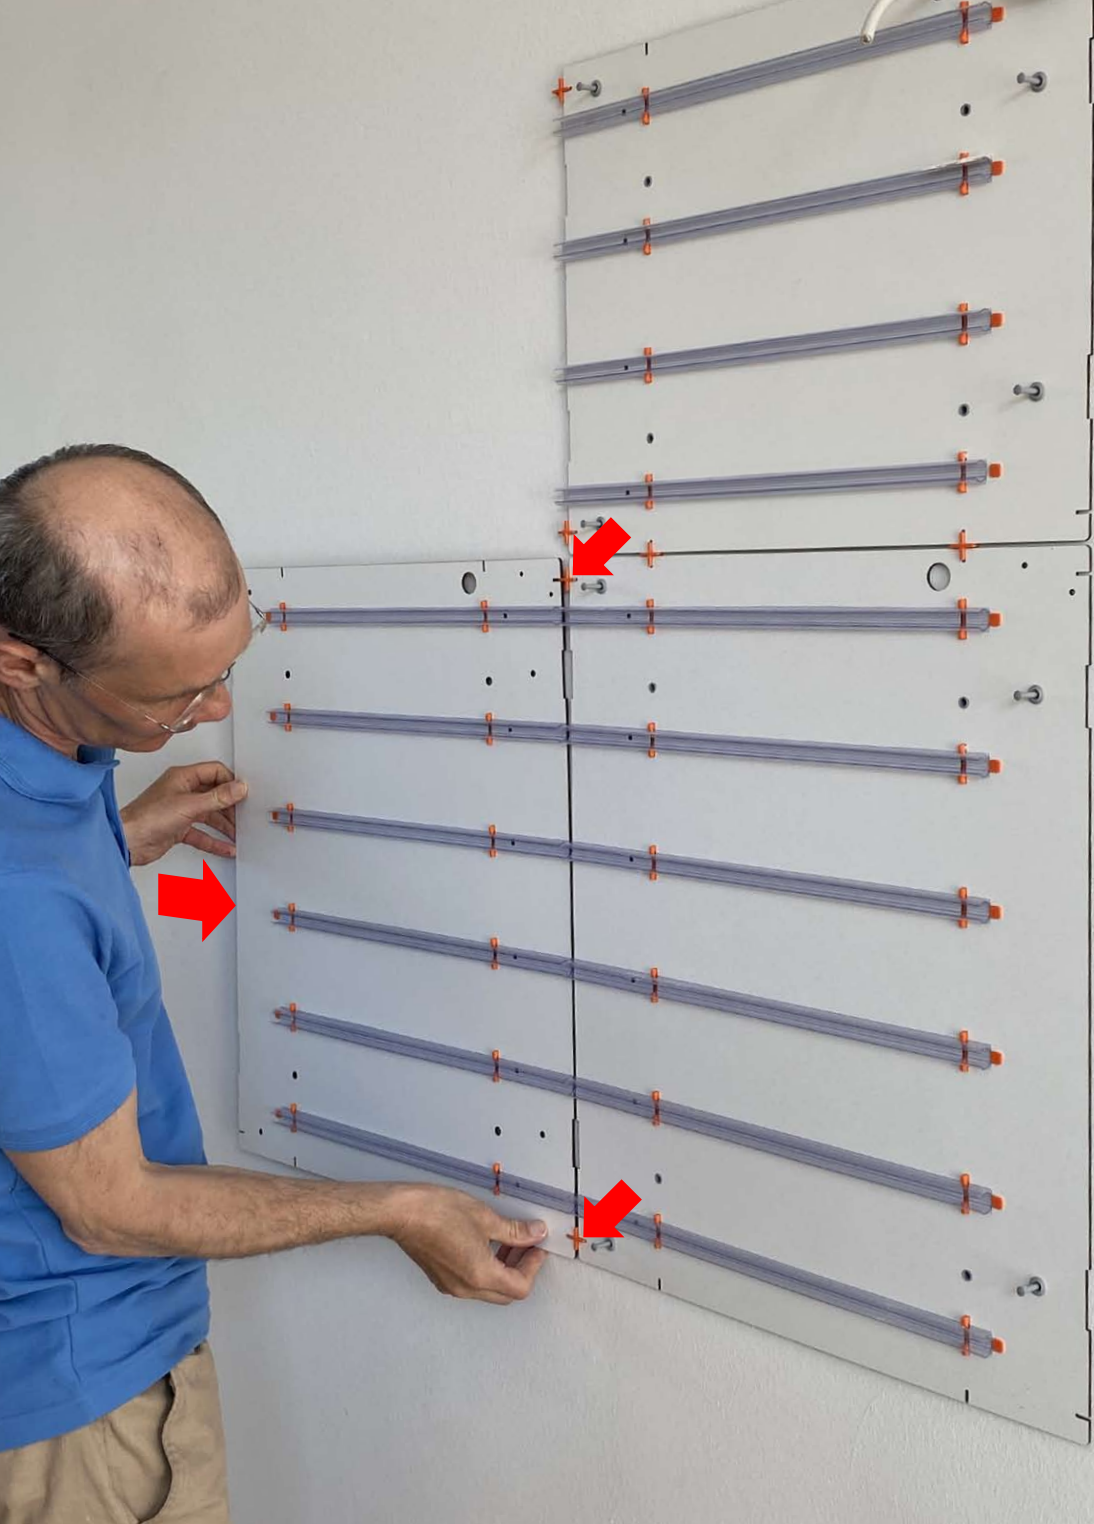

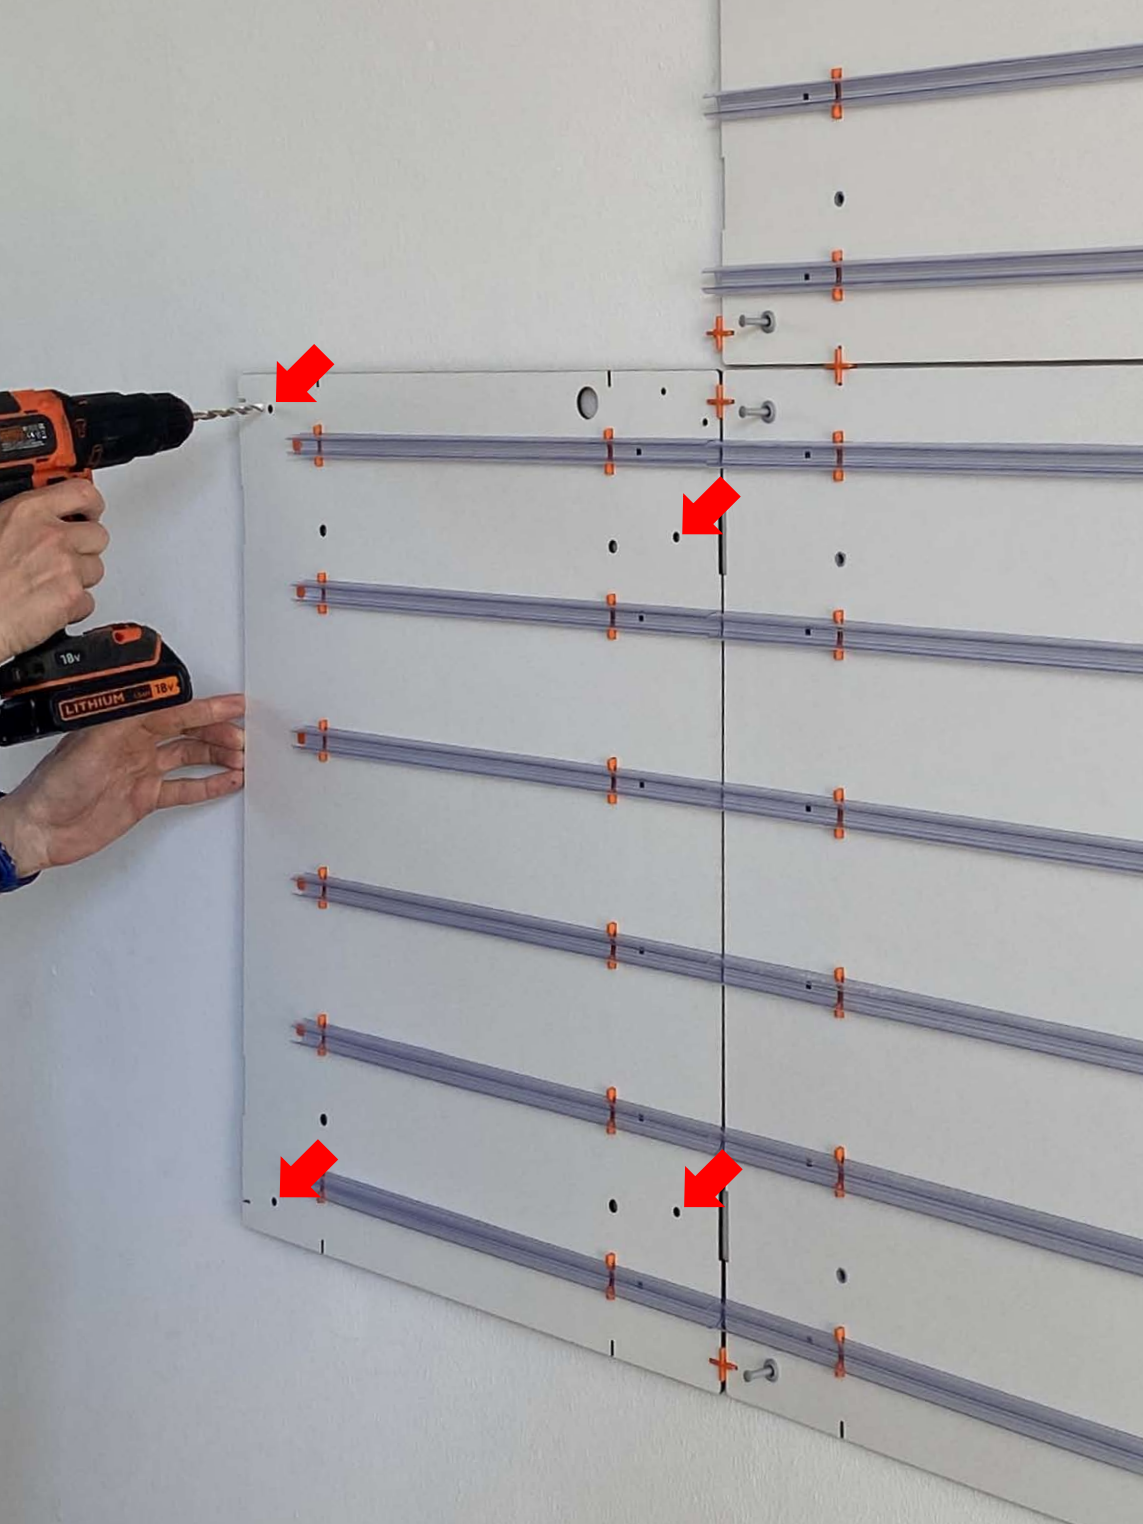


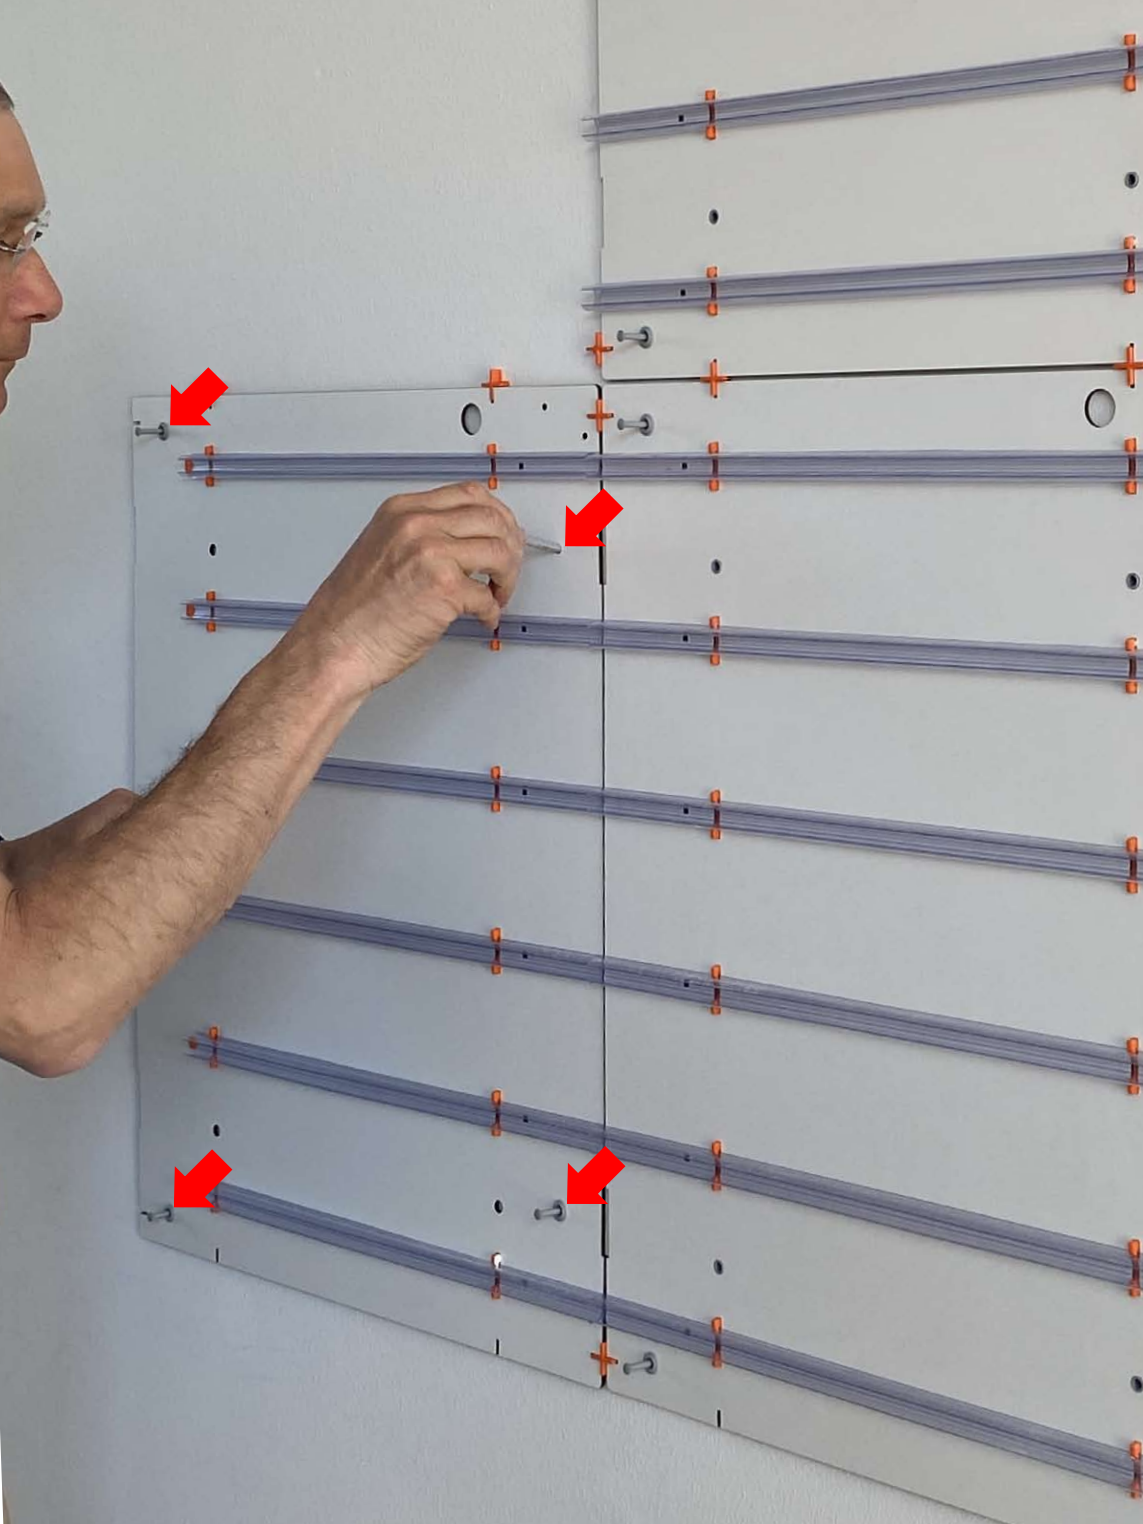


etc.



Ø 8 mm

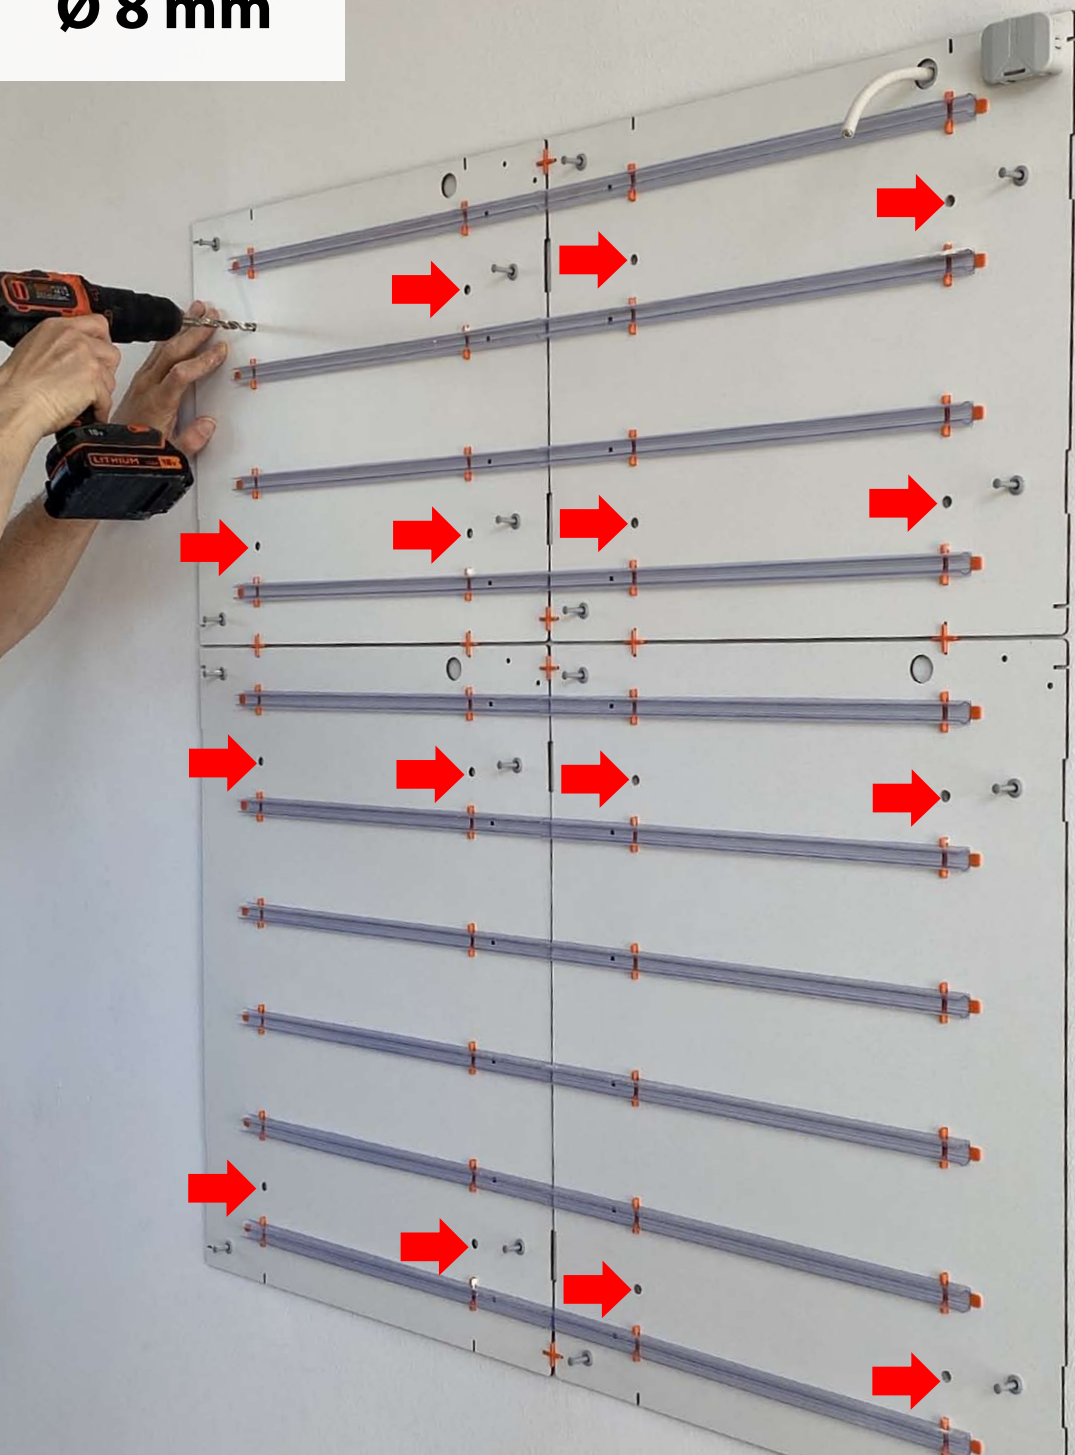

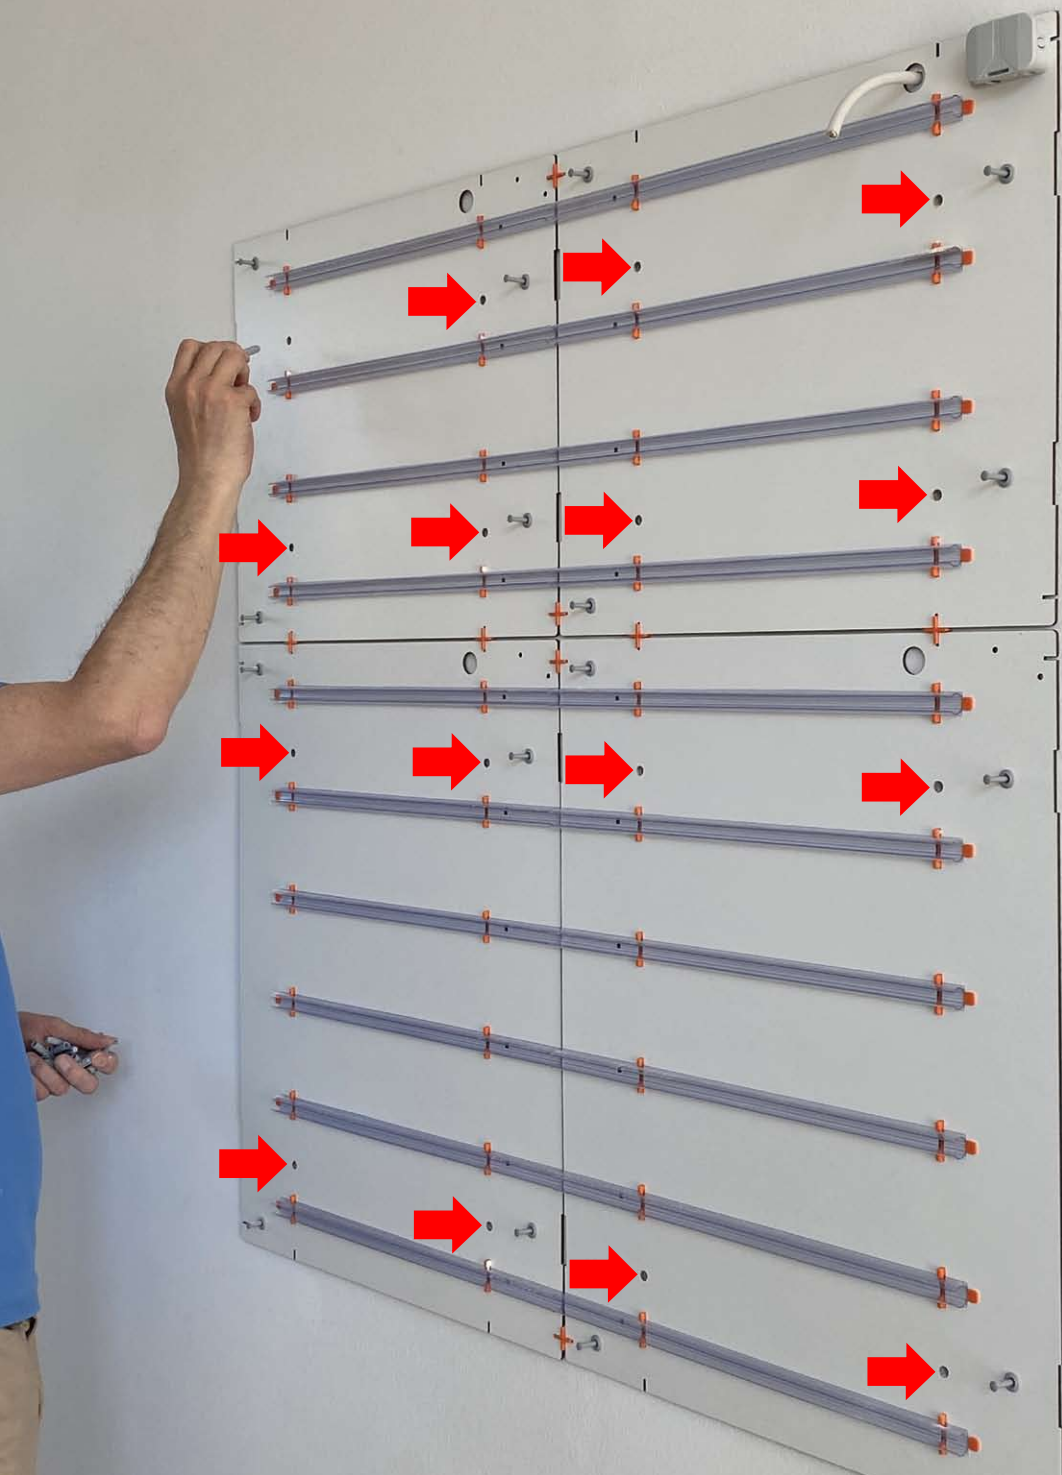







**Lay the light tube as
straight as possible,
avoiding any kinks.**





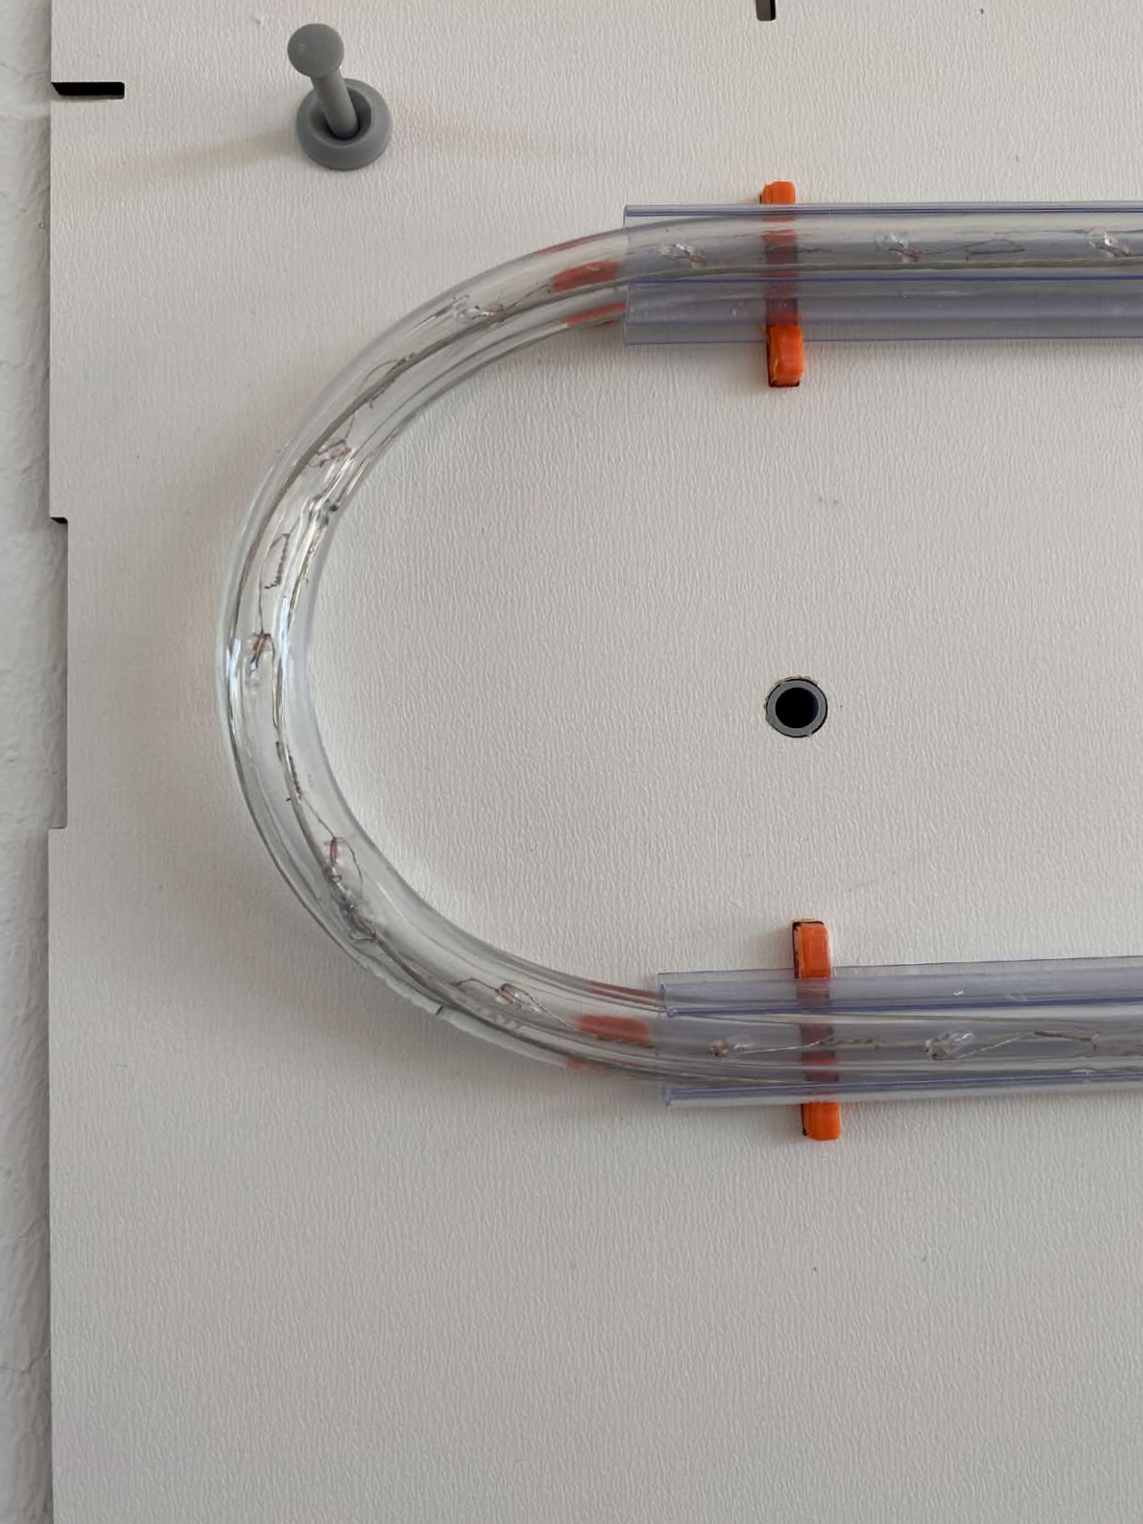

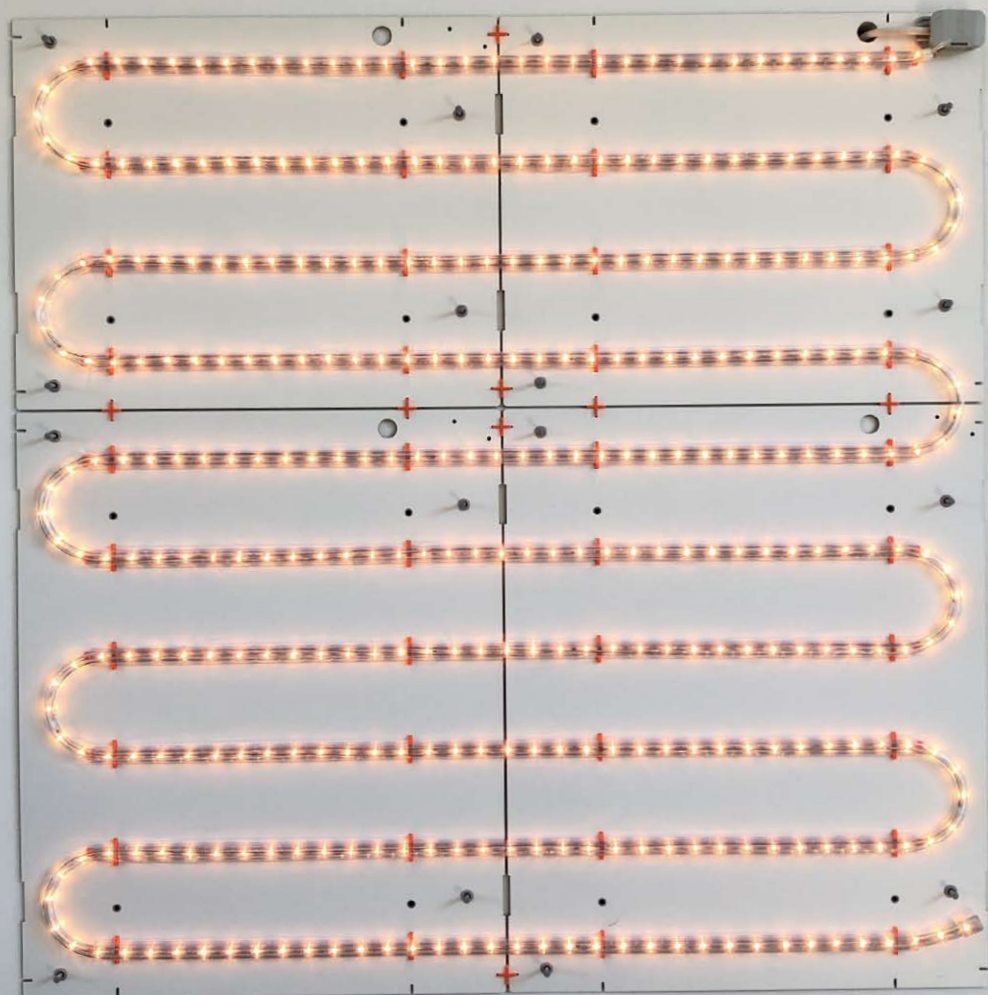




5 mm







**Turn the bracket
45° to the left and
screw it in only
loosely (it must
still be possible
to turn it)**

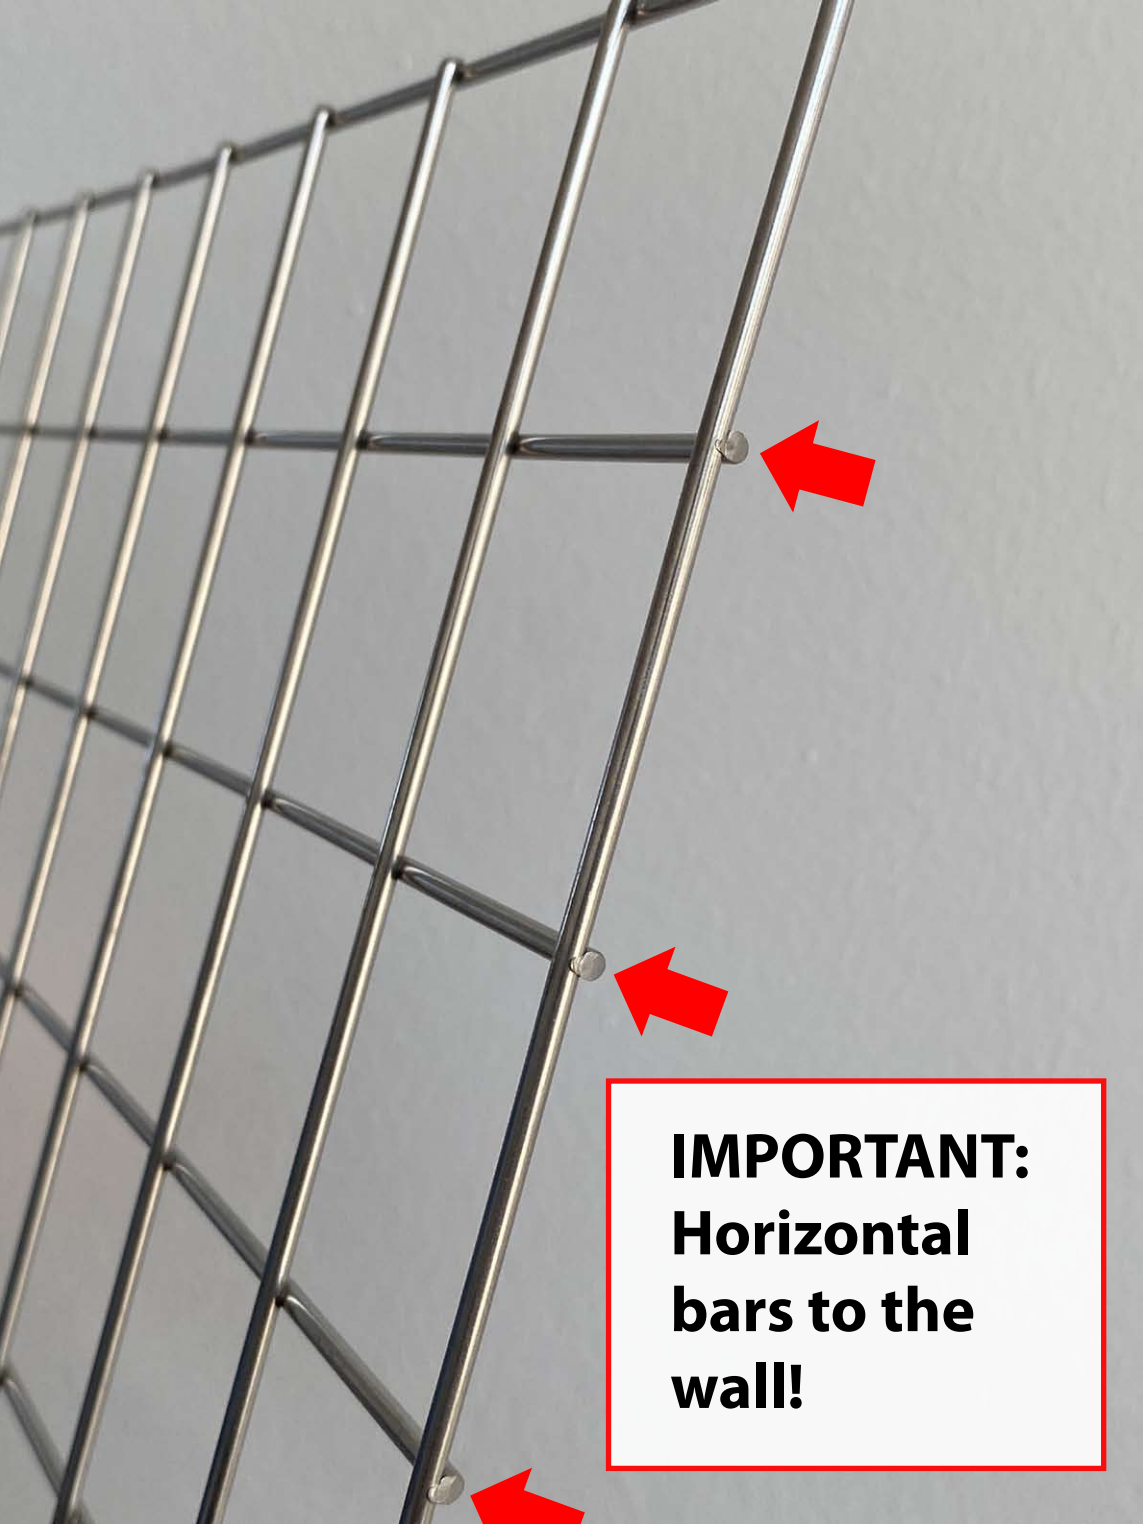

**IMPORTANT:
Horizontal
bars to the
wall!**

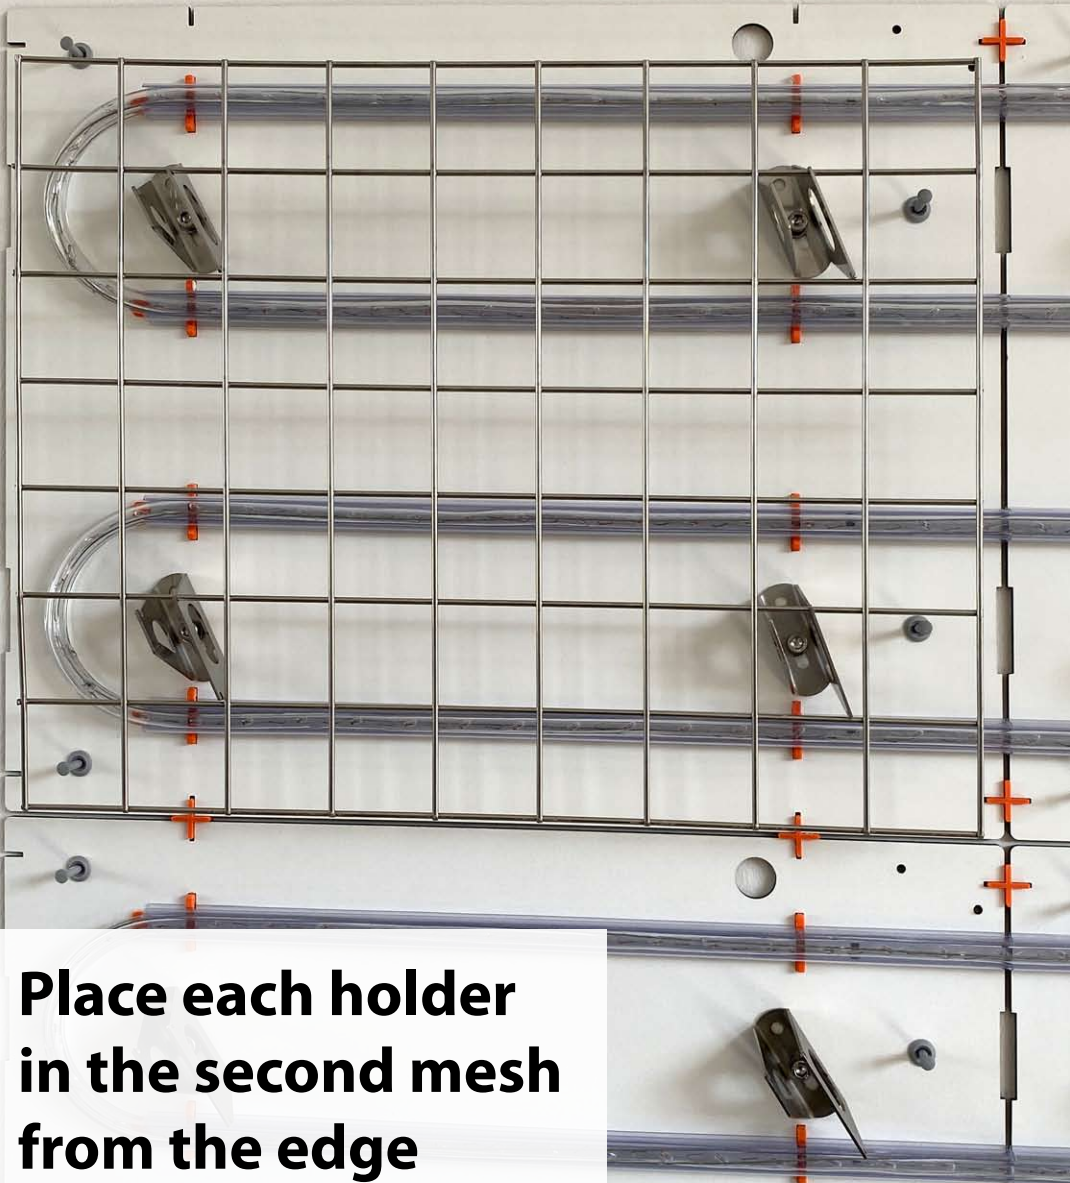

**Place each holder
in the second mesh
from the edge**

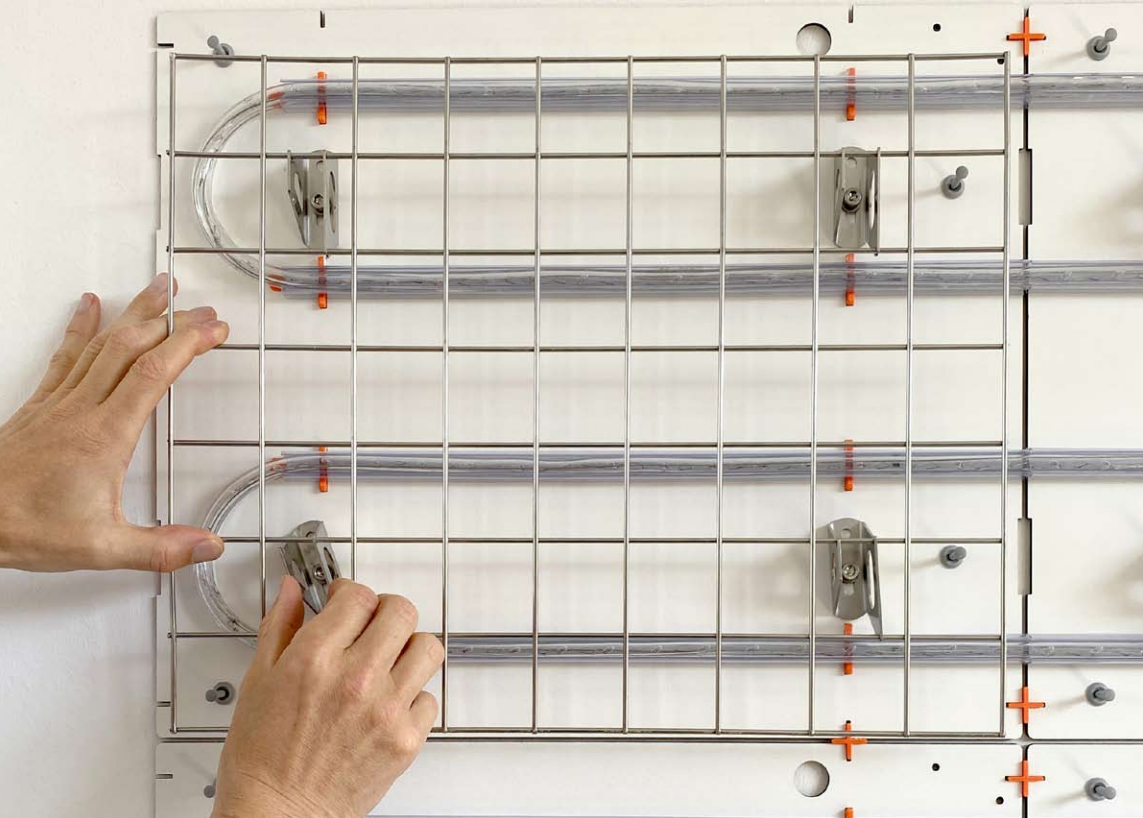


**Turn the holder
vertically.**

**All notches must
click into the grid.**






Move the grid sideways until the holders are aligned with the centre of the mesh.

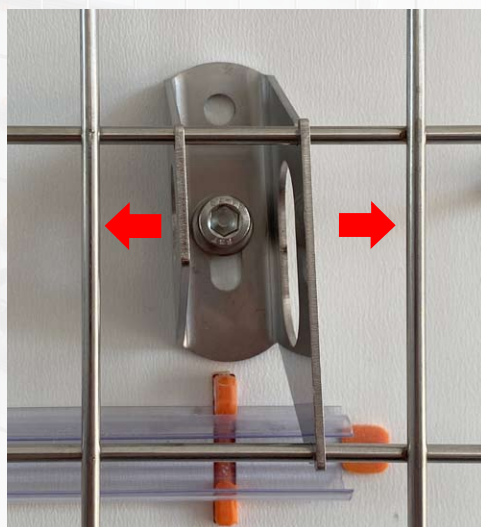




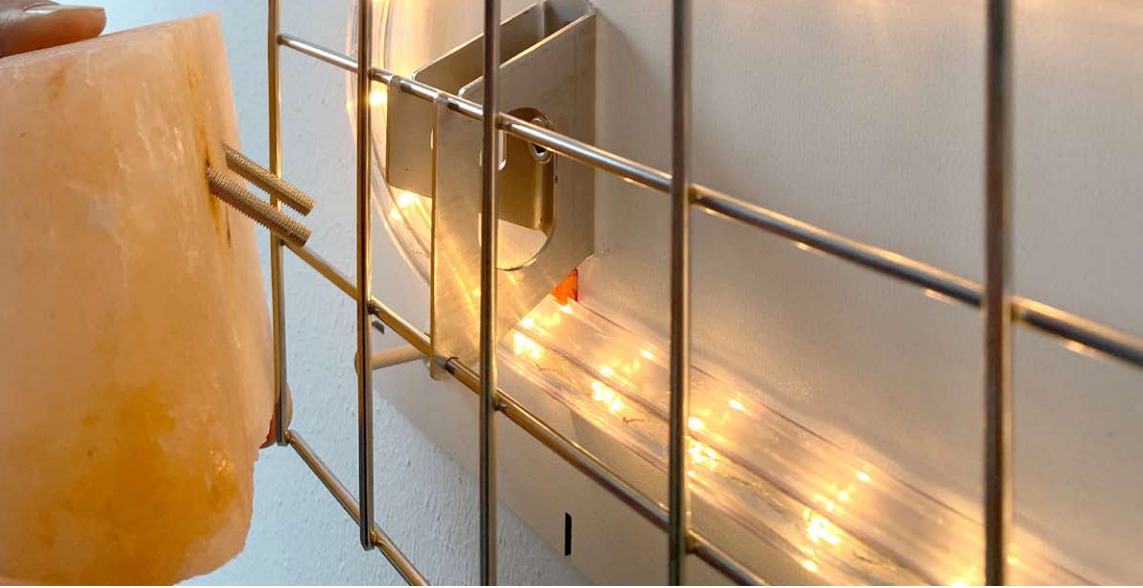

All the stones at the edge should be flush with the backplate.



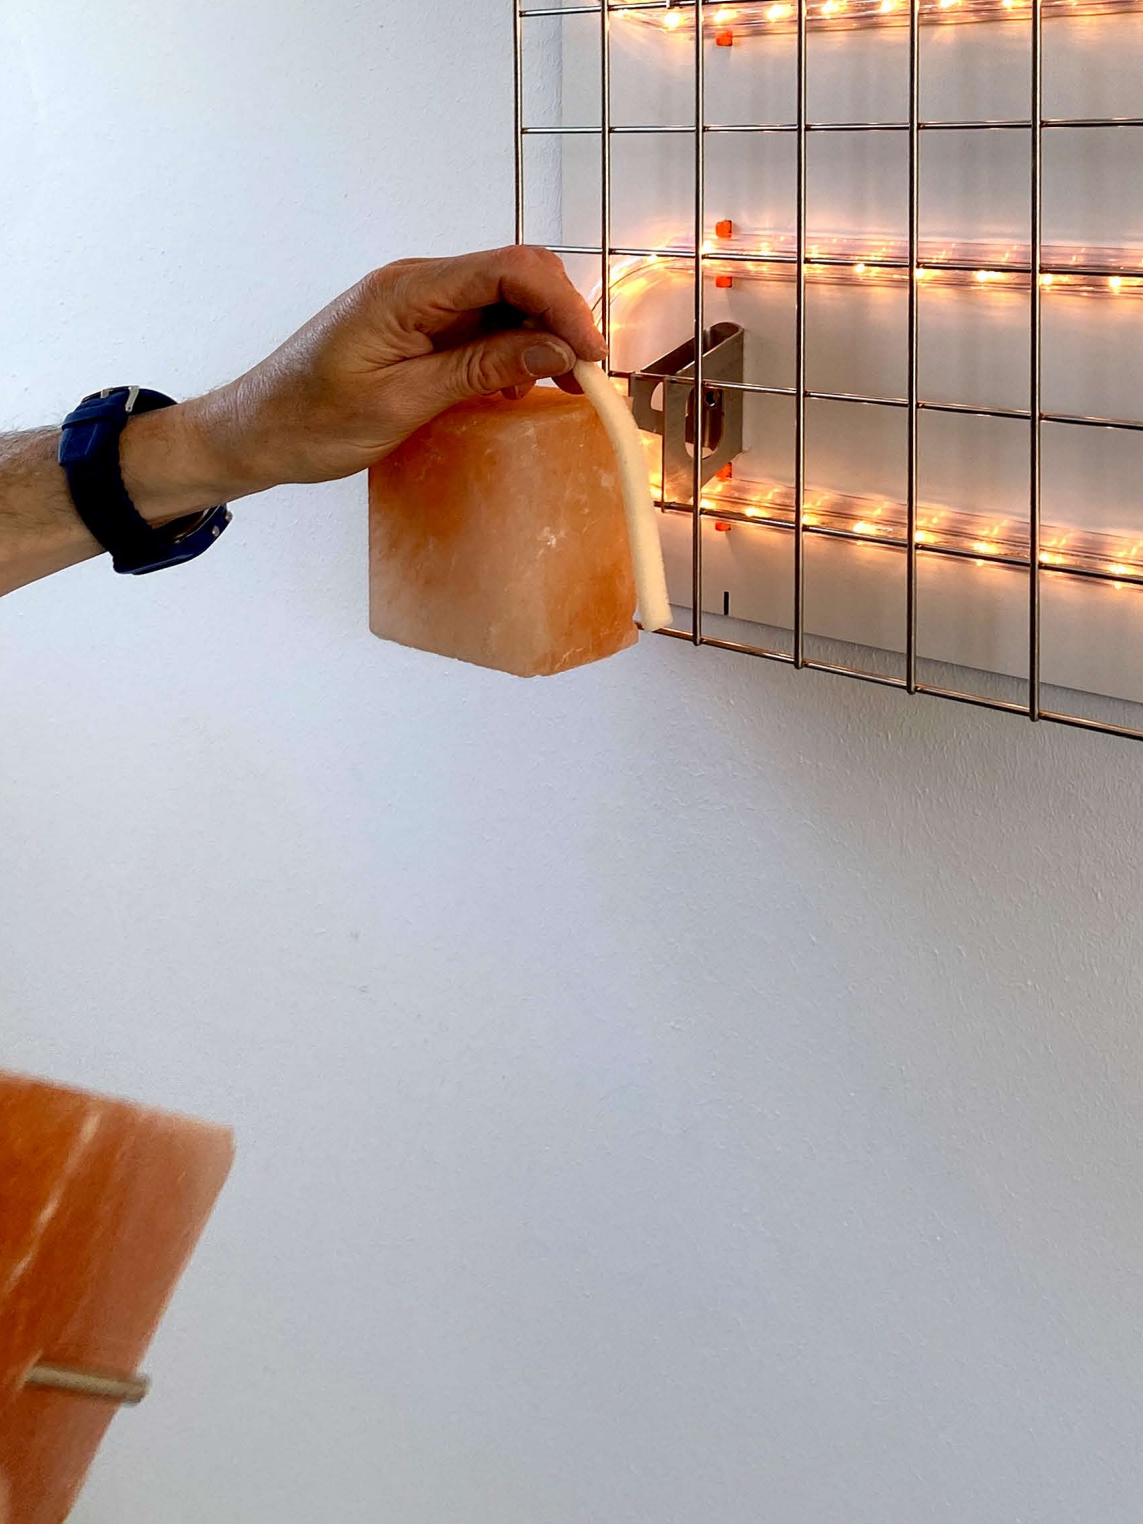


**Hook in brick and push against
the foam strip.**







To ensure the grids are in level: attach the grid guides over the joints of the penultimate course of stones.

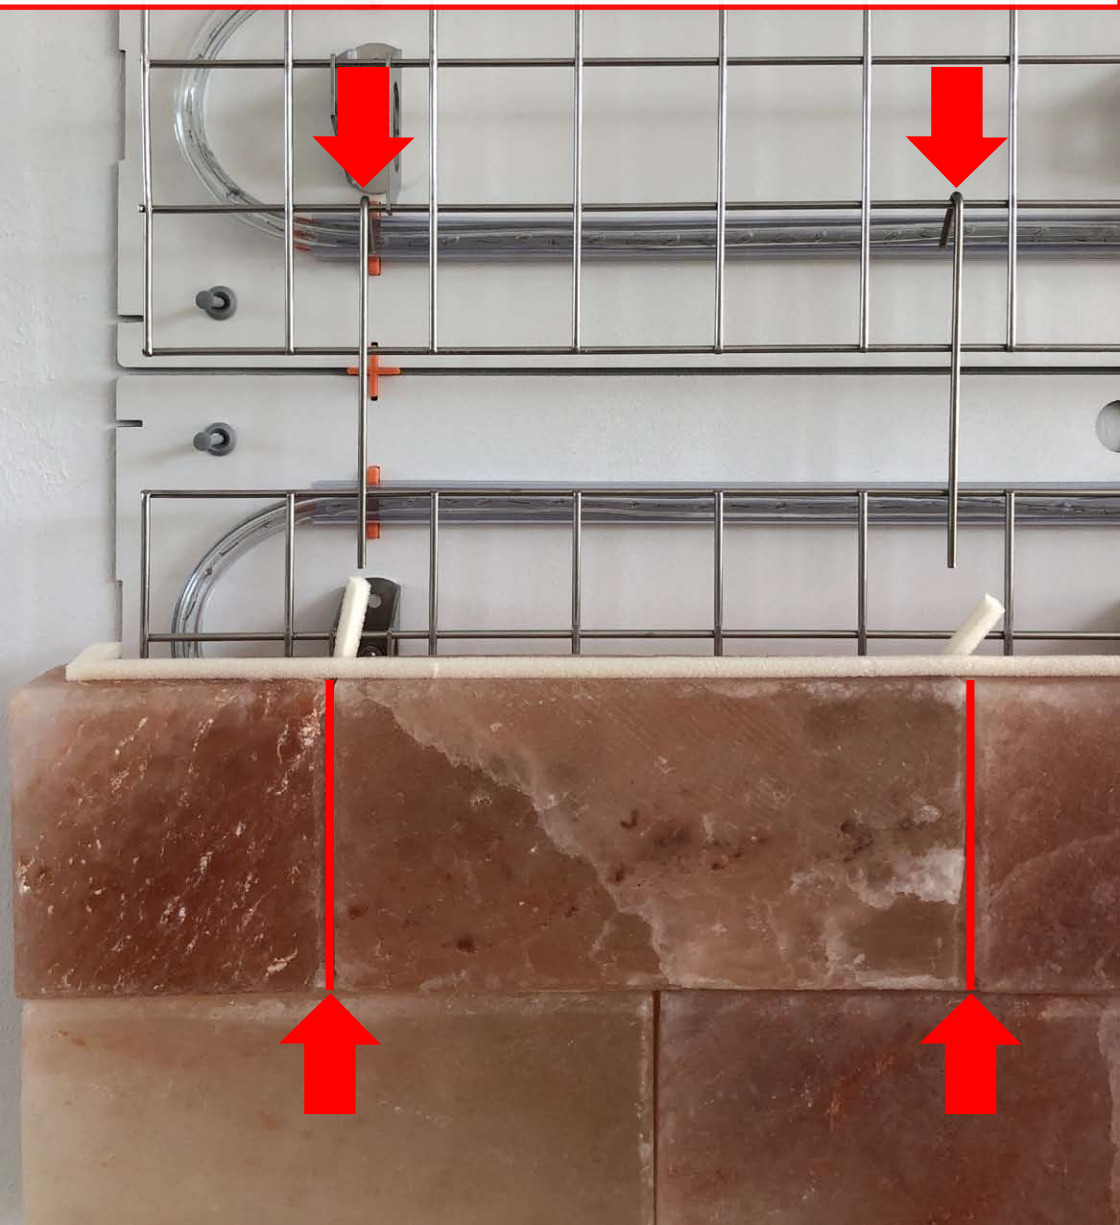


Knurled nut flush with the end of the screw




Hang the brick in place and tighten the knurled nut.




Press any protruding strips of foam back in.

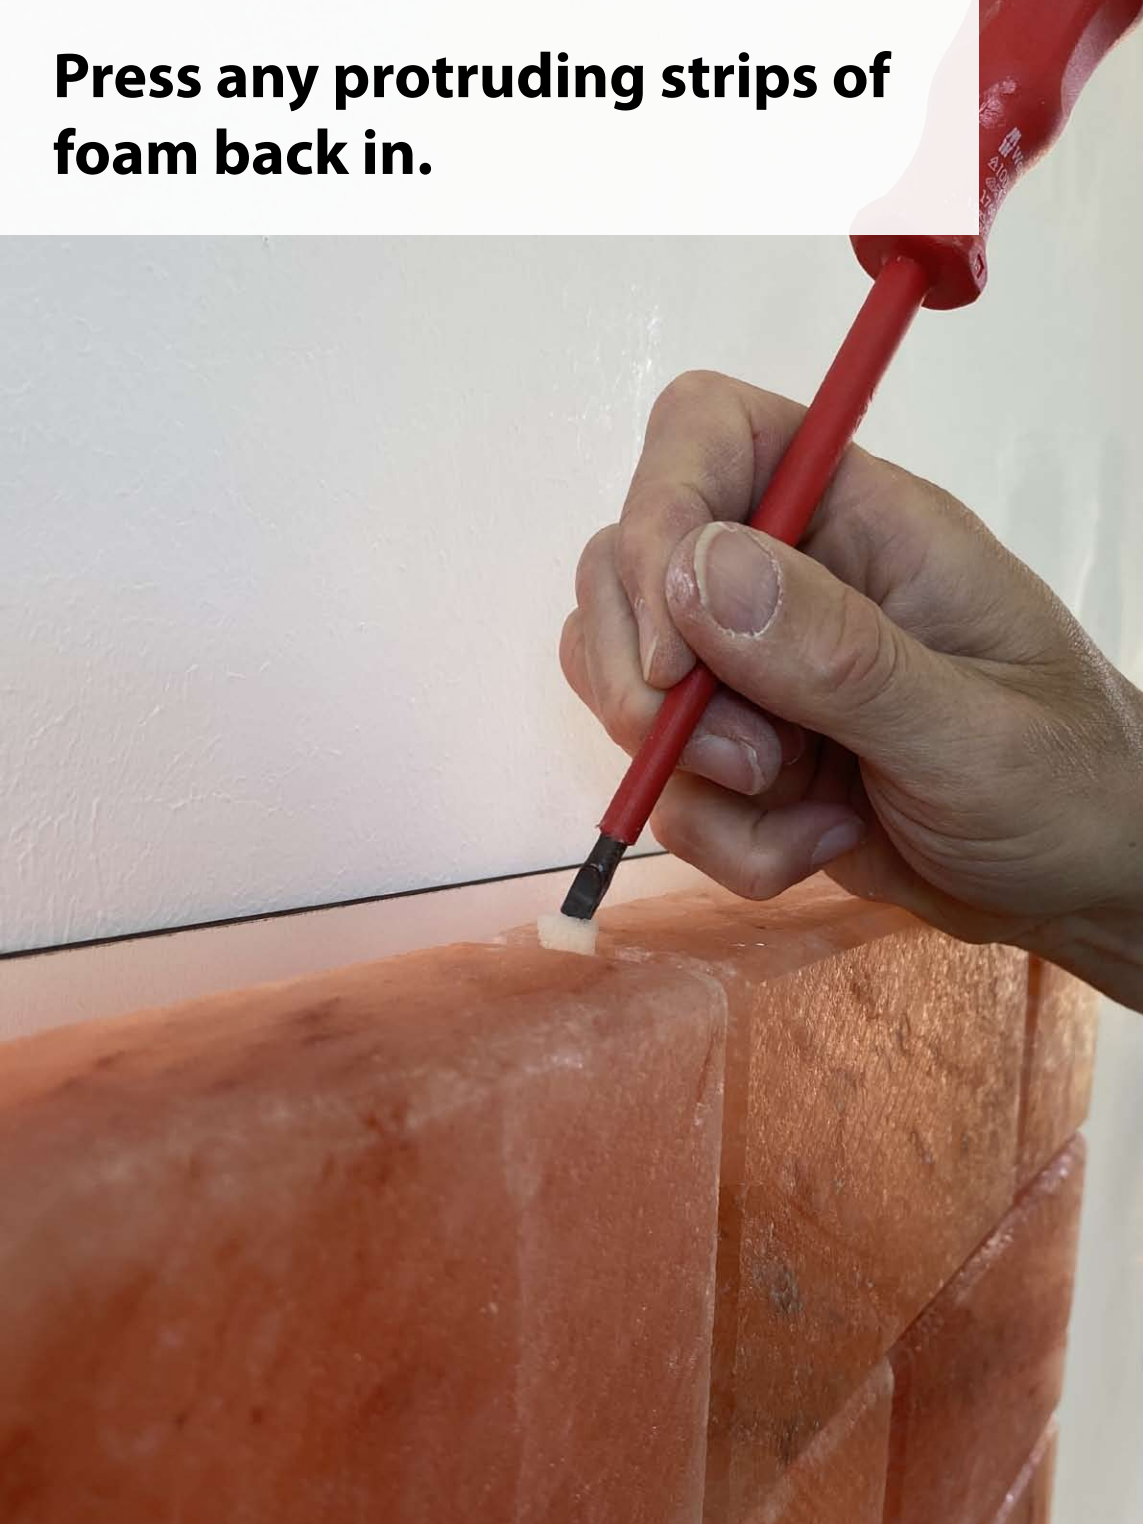



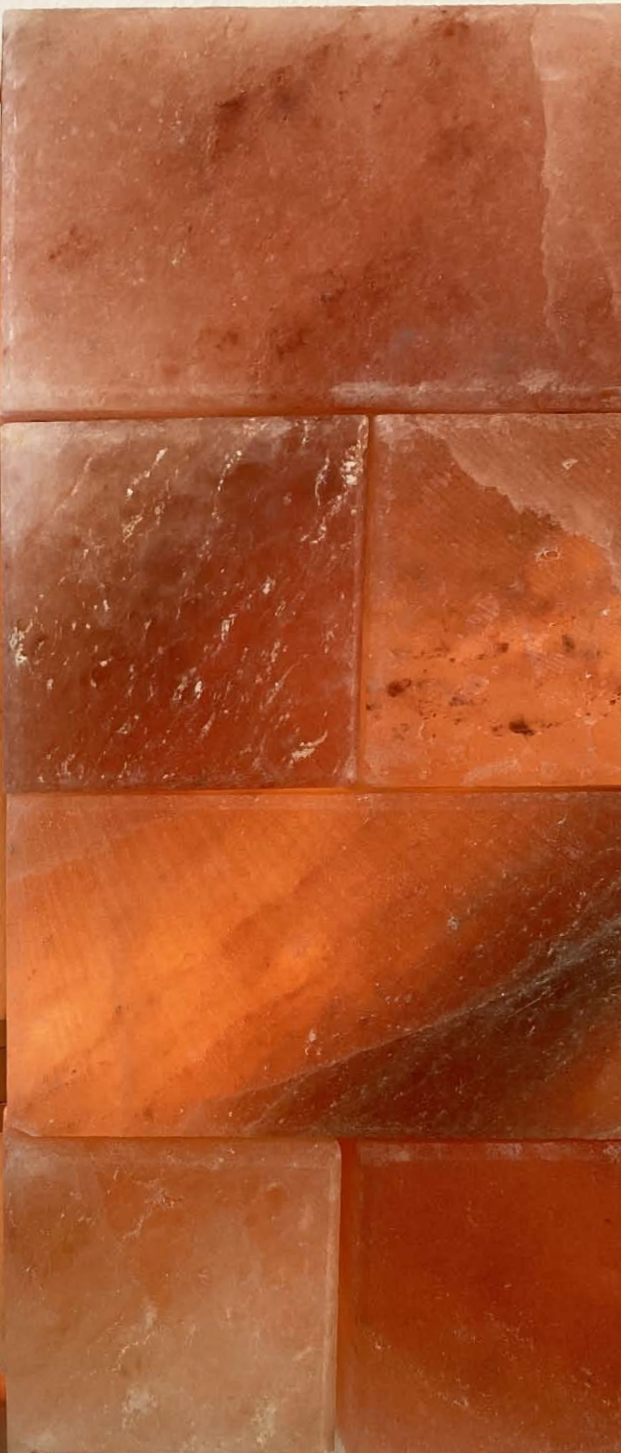

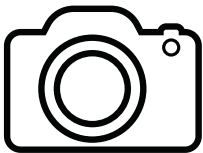

We would be delighted to receive photos of your salt wall.



Please feel free to include a comment when sending them to info@Bergsalz.com or Instagram: [@salzwand](https://www.instagram.com/salzwand)